



124.30-4.00	Electronic Accelerator (EA)/Cruise Control (CC)/Idle Speed Control (ISC), Engine 119 LH-SFI	As of M.Y.1993	Page 1 of 1
-------------	--	----------------	-------------

F1	Fuse and relay box	
F1-5	Fuse 5, terminal 15	7L 17L
M16/1	Electronic accelerator/cruise control actuator	3M
M16/1k1	Magnetic clutch	2K
M16/1m1	Actuator motor	3L
M16/1r1	Actuator reference potentiometer	5K
M16/1r2	Throttle body actual value potentiometer	3K
M16/1s1	Safety contact switch (fuel pump control)	5K
M16/1s2	Closed throttle position switch	4K
M16/1x1	Electronic accelerator/cruise control actuator connector	1I
N3/1	LH sequential multiport fuel injection control module	11M
N4/1	Electronic accelerator/cruise control module	10A
N7	Exterior lamp failure monitoring module	17M
N16/1	Base module	12M
N30/1	Antilock brake system/acceleration slip regulation control module	18M
S9/1	Stop lamp switch	15M
S16/3	Starter lock-out/backup lamp switch (transmission range recognition)	10M
S29/3	Closed throttle position switch	7M
S29/3x1	Closed throttle position switch connector	6I
S40	Cruise control switch	8M
V	Decelerate/set	
B	Accelerate/set	
SP	Resume AOff	
A	Off	
S40x1	Cruise control switch connector	8I

W16	Ground (component compartment)	
X11/4	Data link connector (diagnostic trouble code, 38-pole)	12H
X11/18	ABS/ASR/electronic accelerator connector (chassis)	6F (6-pole)
X33/14	Cruise control connector (cockpit/engine) (10-pole)	8F 15H
X35/7	Cockpit/module box plug connection (12-pole)	14H
X35/8	Cockpit/module box plug connection (electronic accelerator/cruise control/idle speed control) (14-pole)	11F
X49/2	Backup lamp/starter lock-out switch connector	9H
Z84/1	Electronic accelerator actuator connector sleeve (+ signal, feed from electronic accelerator control module)	1F
Z84/2	Electronic accelerator actuator connector sleeve (? signal, feed from electronic accelerator control module)	3F
Z94	Brake lamp switch closer connector sleeve (feed from 16F brake lamp switch - S9/1, closer)	
Z95	Brake lamp switch opener connector sleeve (feed from brake lamp switch (S9/1), opener)	15F
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	
	Explanations and Notes of Wiring Diagram see Section 00-ALocations/Connections/Overview see Section 00-B/00?C	

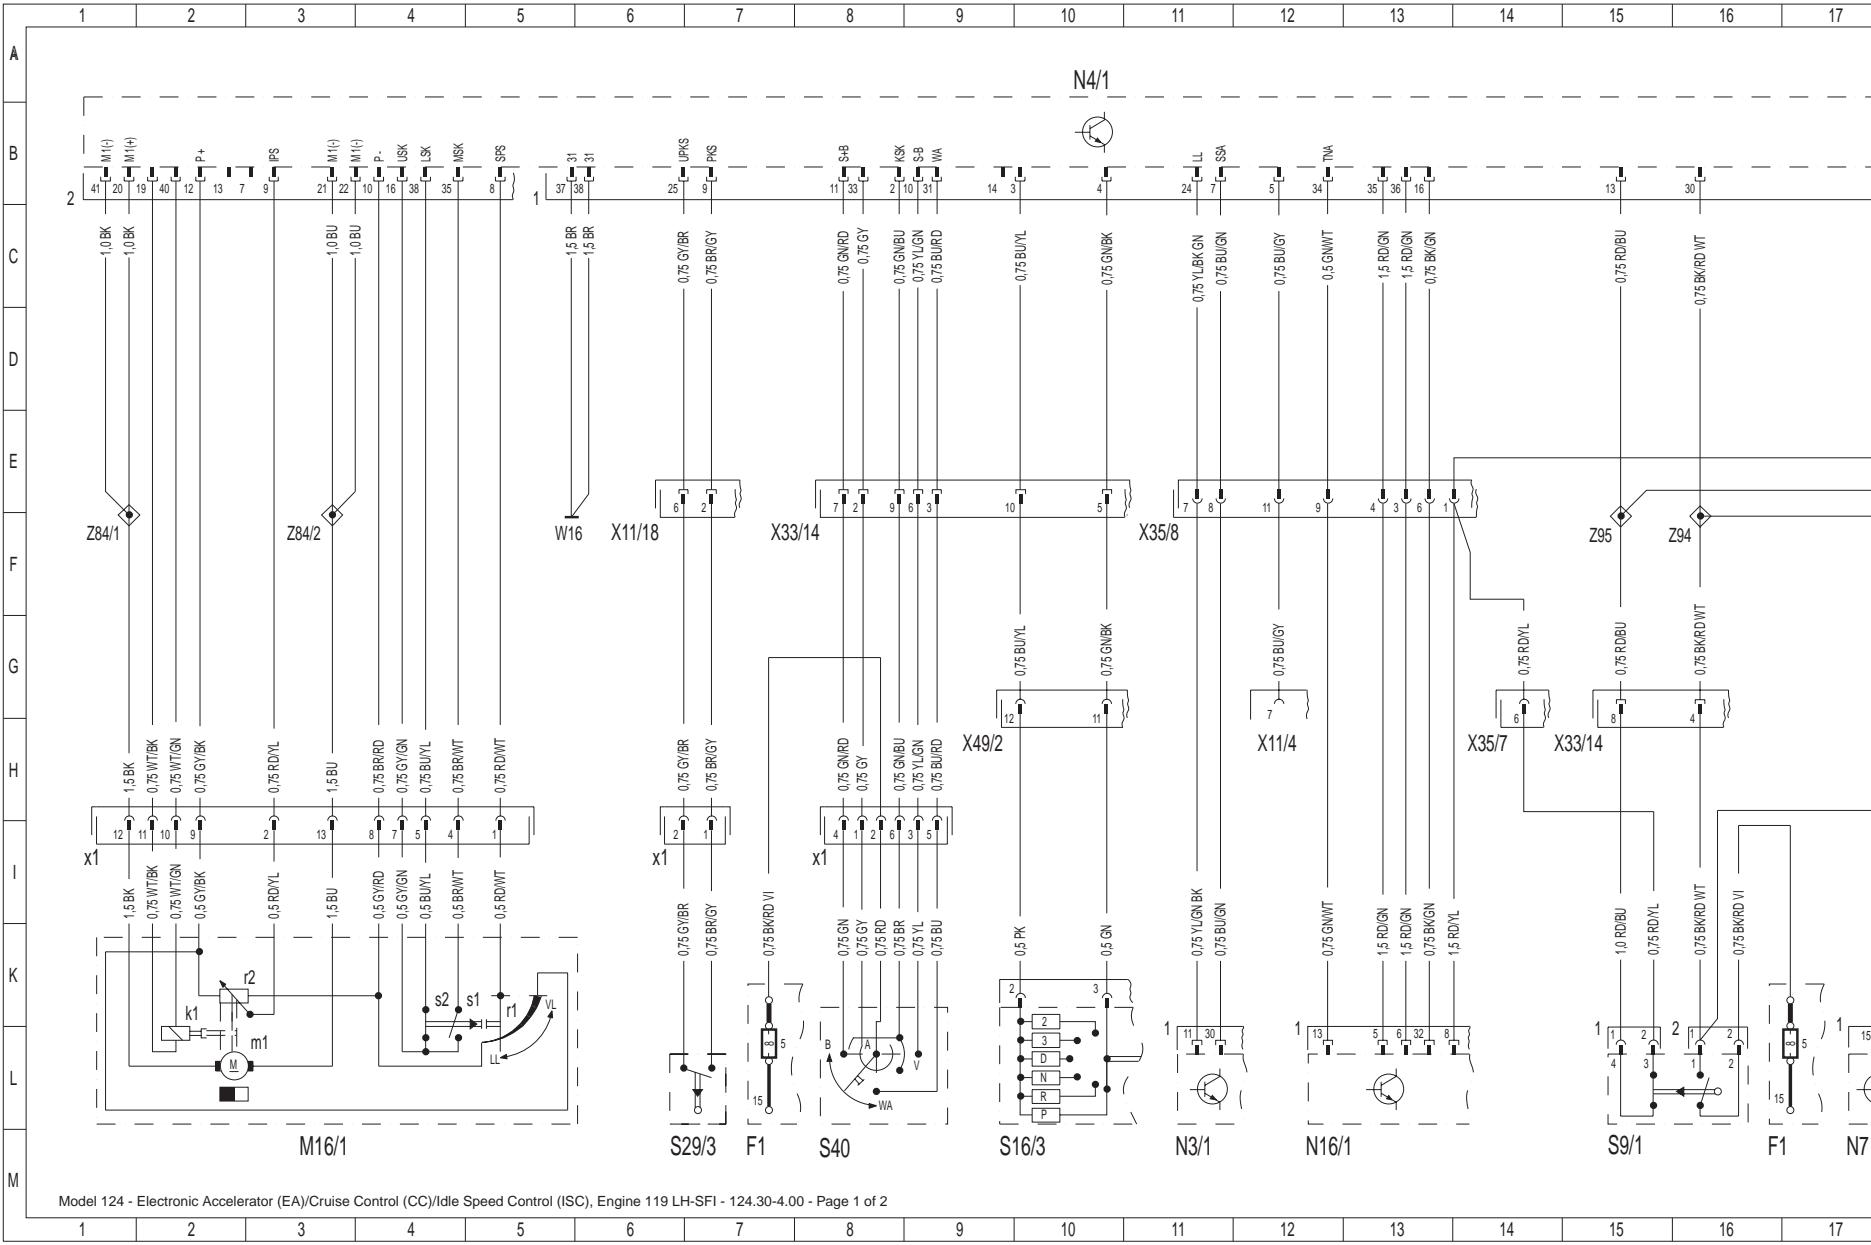

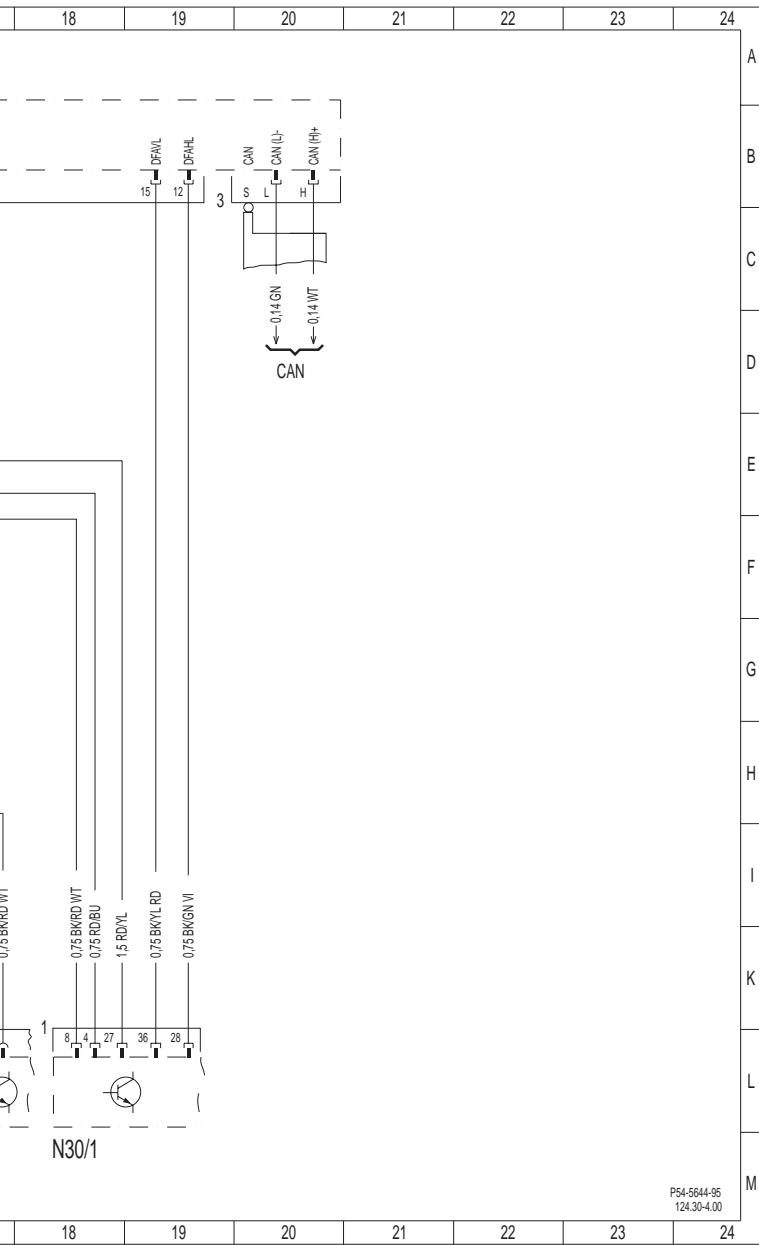

P54-5644-95
124.30-4.00