

| | | | |
|-------------|--|----------------|-------------|
| 124.30-5.00 | Cruise Control (CC), Engine 119 LH-SFI | As of M.Y.1993 | Page 1 of 1 |
|-------------|--|----------------|-------------|

| | | | |
|---------|--|-----------|--|
| F1 | Fuse and relay box | | |
| F1-5 | Fuse 5, terminal 15 | 5L 14L | |
| M16/2 | Cruise control/idle speed control actuator | 3M | |
| M16/2k1 | Magnetic clutch | 3L | |
| M16/2m1 | Actuator motor | 3L | |
| M16/2r1 | Actuator reference potentiometer | 3K | |
| M16/2r2 | Throttle body actual value potentiometer | 2K | |
| M16/2s1 | Safety contact switch | 4K | |
| M16/2s2 | Closed throttle position recognition switch | 2L | |
| M16/2x1 | Cruise control/idle speed control actuator connector | 1I | |
| N3/1 | LH sequential multiport fuel injection control module | 16M | |
| N4/3 | Cruise control/idle speed control module | 10A | |
| N7 | Exterior lamp failure monitoring module | 14M | |
| N16/1 | Base module | 15M | |
| N30 | Antilock brake system control module | 9M | |
| S9/1 | Stop lamp switch | 11M | |
| S16/3 | Starter lock-out/backup lamp switch (transmission range recognition) | 7M | |
| S40 | Cruise control switch | 6M | |
| | V Decelerate/set | | |
| | B Accelerate/set | | |
| | SP Resume AOff | | |
| | A Off | | |
| S40x1 | Cruise control switch connector | 6I | |
| W16 | Ground (component compartment) | | |
| X11/4 | Data link connector (diagnostic trouble code, 38-pole) | 17H | |
| X33/14 | Cruise control connector (cockpit/engine) (10-pole) | 5F 11H | |
| X35/7 | Cockpit/module box plug connection (12-pole) | 13H | |
| X35/8 | Cockpit/module box plug connection (electronic accelerator/cruise control/idle speed control) (14-pole) | 13F | |
| X49/2 | Backup lamp/starter lock-out switch connector | 7H | |
| Z84/1 | Electronic accelerator actuator connector sleeve (+ signal, feed from electronic accelerator control module) | 1F | |
| Z84/2 | Electronic accelerator actuator connector sleeve (? signal, feed from electronic accelerator control module) | 4F | |
| Z94 | Brake lamp switch closer connector sleeve (feed from 9F brake lamp switch - S9/1, closer) | 12F | |
| Z95 | Brake lamp switch opener connector sleeve (feed from brake lamp switch (S9/1), opener) | 11F | |
| | Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed. | | |
| | Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C | | |



