

Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
1	15R	16	Glove compartment light Rear window wiper/washer system (station wagon) Radio Rear window defroster Rear window sun shade motor Sliding/pop-up roof Folding rear head restraints Central locking system/orthopedic backrest Cigar lighter SBE control module (Cabriolet) HS control module Convenience feature
2	15R	16	Power windows Convenience feature Headlamp wiper/washer Wiper/washer system Seat adjustment
3	58R	8	Illumination: License plate, instrument cluster, control elements, radio, cigar lighter Warning buzzer Parking/tail /side marker lamps (Right) Headlamp wiper/washer Electrically adjustable and heated outside rearview mirrors HS control module Folding rear head restraints Rear backrest/head restraints Sliding/pop-up roof Seat heater switch RB switch Power soft top switch Front seat adjustment with memory Seat belt warning module
4	58N	8	Fog lamp, rear fog lamp



Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
5	15	8	Stop lamp switch Front dome lamp Tachometer Inductive speed sensor Instrument cluster Exterior lamp failure monitoring module Cruise control Warning module RB control lamp RB switch Power soft top Seat belt warning module Daytime running lamp control module (CDN)
6	15	8	Outside temperature gauge Fanfare horns Injectors Starter switch Instrument cluster ABS warning lamps ABS MIL



Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
7	15	16	Auto. A/C Automatic transmission electric: Kickdown solenoid valve Transmission mode valve Data link connector, terminal 16 Throttle valve actual valve potentiometer Blower motor Heater/climate control system: Electromagnetic clutch A/C compressor Auxiliary fan relay, terminal 86 Auxiliary fan relay (stage 2) O.S. (after TWC) heater and glow plug



Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
9	30	8	Control elements illumination Transmission selector lever position illumination Dome lamp (with shut-off delay and reading lamp) Instrument illumination rheostat Exterior lamp switch illumination Vanity mirror light Radio Relay convenience feature, terminal 86 Power seat relay module Rear headrest unlocking switch Rear window sun shade switch Seat heater switch RB switch Power soft top switch Power window switch Diagnostic module Clock Hazard warning system Warning buzzer contact
10	30	25	Rear window defroster
11	15	8 16	Transmission oil cooling ATA Control module
12	15x	16 30	ATA Control module Blower motor (auto. A/C) Blower regulator (auto. A/C)
13	56b	8	Low beam left
14	56b	8	Low beam right
15	56a	8	High beam left (High beam left with auxiliary high beam left)
16	56a	8	High beam right (High beam indicator lamp)



Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
A	15R/30	25	Center power window optional
	15R/30	16	Sliding/pop-up roof optional
	15	8	Power soft top control module optional
	15R	8	RB control module
B	15	8	Seat belt extender system
			Anti-theft alarm system
			Automatic dimming inside rearview mirror
			Seat belt warning module, terminal 86
C	30	16	IRCL control module
			Adjustable, heated outside mirrors
			Automatic antenna
			CD-Player
D	30	16	Rear dome light (Station wagon)
			Entrance/exit lamp
			Anti-theft alarm system
			Seat belt extender (Coupé)
E	15R/30	25	Tailgate lock switch (Station wagon)
			Trunk lamp (except station wagon)
			Rear reading lamps
			IRCL control module
F	15R/30	25	CF control module
			CL control module
			Sound system
			Backrest lock (Coupé)
G	15R/30	25	Auxiliary fan/preresistor
			Front passenger power seat:
			Head restraint motor
			Right front/rear power seat motor group with memory
H	15R/30	25	Backrest motor
			Driver power seat:
			Head restraint motor
			Left front/rear power seat motor group with memory
I	15R/30	25	Backrest motor
			Front passenger power seat:
			Seat forward/backward motor
			Right front/rear power seat motor group with memory
J	15R/30	25	Driver power seat:
			Seat forward/backward motor
			Left front/rear power seat motor group with memory

Fuse location, F1 Fuse and Relay Box

Fuse No.	Circuit	Fuse Amperage	Fused Connections
G	15R/30	25	Power windows (front)
H	15R/30	25	Power windows (rear)

Fuse location, F10 Auxiliary Fuse Holder (REST)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F10	30 30	16 25	REST time-limit or auxiliary heater Auxiliary heater

Fuse location, F15 Auxiliary Fuse Holder (A/C Blower Motor)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F15	15X	30	Blower motor

Fuse location, F22 Auxiliary Fuse Holder (Auto. A/C)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F22	15 30	15 30	Auxiliary fan Auxiliary fan relay module (K9)

Fuse location, F22/1 Auxiliary Fuse Holder (HS)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F22/1	30	16	Heated Seats (HS)

Fuse location, F22/2 Auxiliary Fuse Holder (CTEL)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F22/2	30	8 (MY 93) 7,5 (MY 94 →)	CETL transmitter/receiver

Fuse location, F24 Auxiliary Fuse Holder (CST/RB)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F24	30	8	RB deployment solenoid
	30	16	RB control module (manual soft top)

Fuse location, F24/1 Auxiliary Fuse Holder (Hydraulic unit)

Fuse No.	Circuit	Fuse Amperage	Fused Connections
F24/1	30	30	CST/RB hydraulic unit (power soft top)

