


01-1020 Dimensions for pressing in straight pins in crankcase

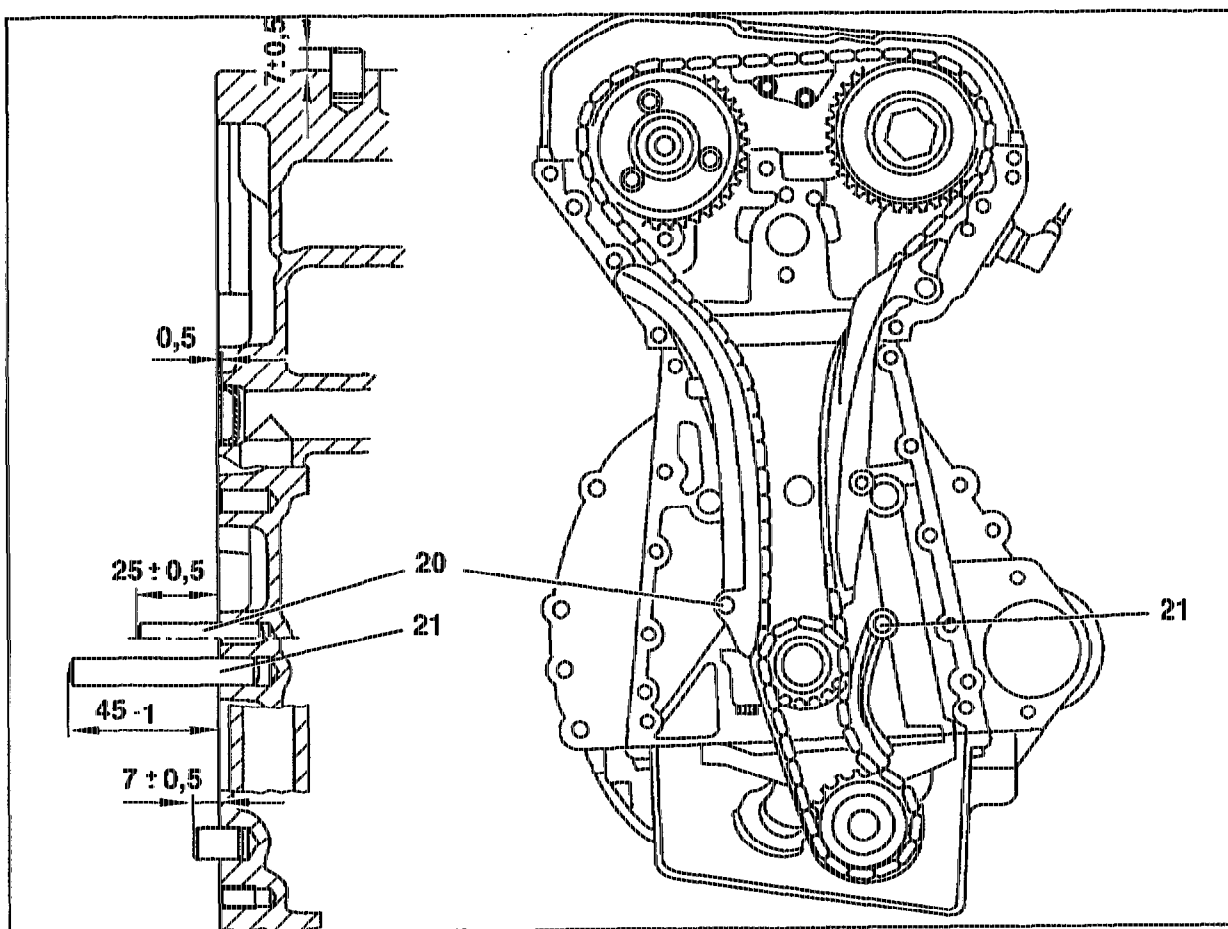

P01.40-0236-57

Straight pins (20) and (21)

install, do not knock in as far as the stop.

Note

The specified installation dimensions must be observed so that the appropriate attachment, e.g. guide rail provides adequate bearing guide.