


07.3-1606 Removing and installing starting valve

Operation No. of operation texts and work units or standard texts
and flat rates:
07-1606

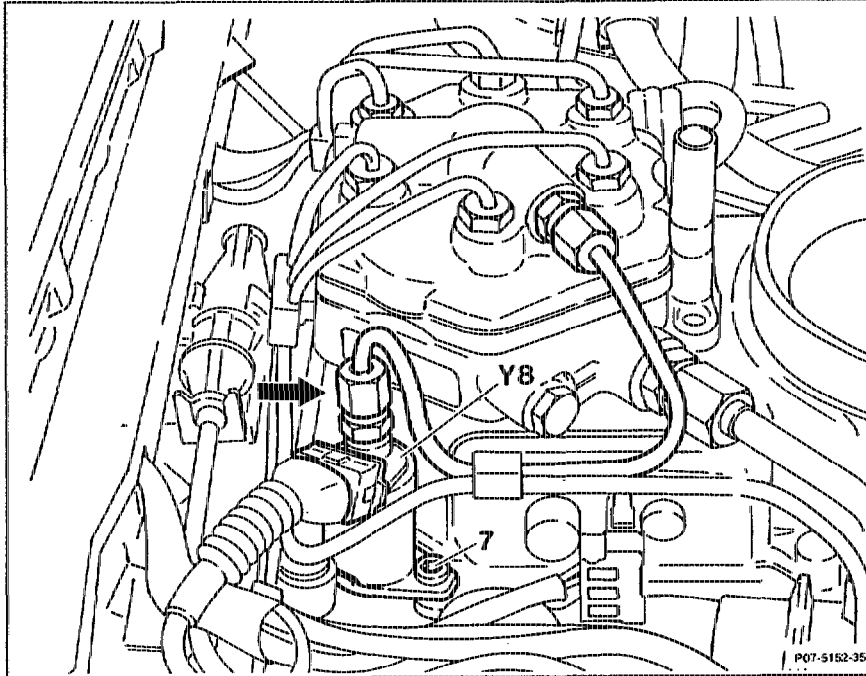

Electrical plug connection	detach from starting valve, plug in.
Starting valve fuel line (arrow)	unscrew, screw on. Collect fuel flowing out.
Screws (7)	unscrew, screw in.
Starting valve (Y8)	remove, install with new gasket.
Leak test of all connection points	check with engine running.