



07.3-1660 Replacing seal for control plunger

Preceding work:
Removing and installing fuel distributor (07.3-1674)

Operation No. of operation texts and work units or standard texts
and flat rates:
07-1660

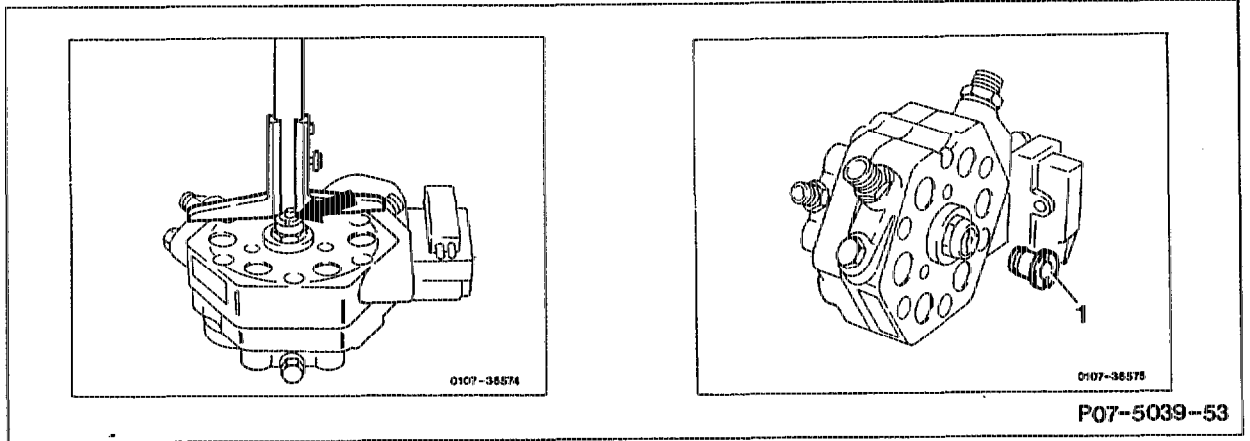

- | | |
|--------------------------------------|---|
| Position (arrow) of screw plug | measure with depth gauge and note. Mark position with marking tool as a safeguard. |
| Screw plug (1) | remove with pronged wrench (102 589 00 07 00). |
| Seal of screw plug | replace, ensure seal is correctly seated. |
| Screw plug (1) | screw in to the value or marking measured prior to removal. |
| | 
Failure to do this means control plunger adopts incorrect basic setting. |
| Idling speed | set (see Diagnosis Manual Engine, Volume 1). |

Special tool

