


## 07.3-1683 Removing and installing fuel accumulator

Operation No. of operation texts and work units or standard texts  
and flat rates:  
07-1683

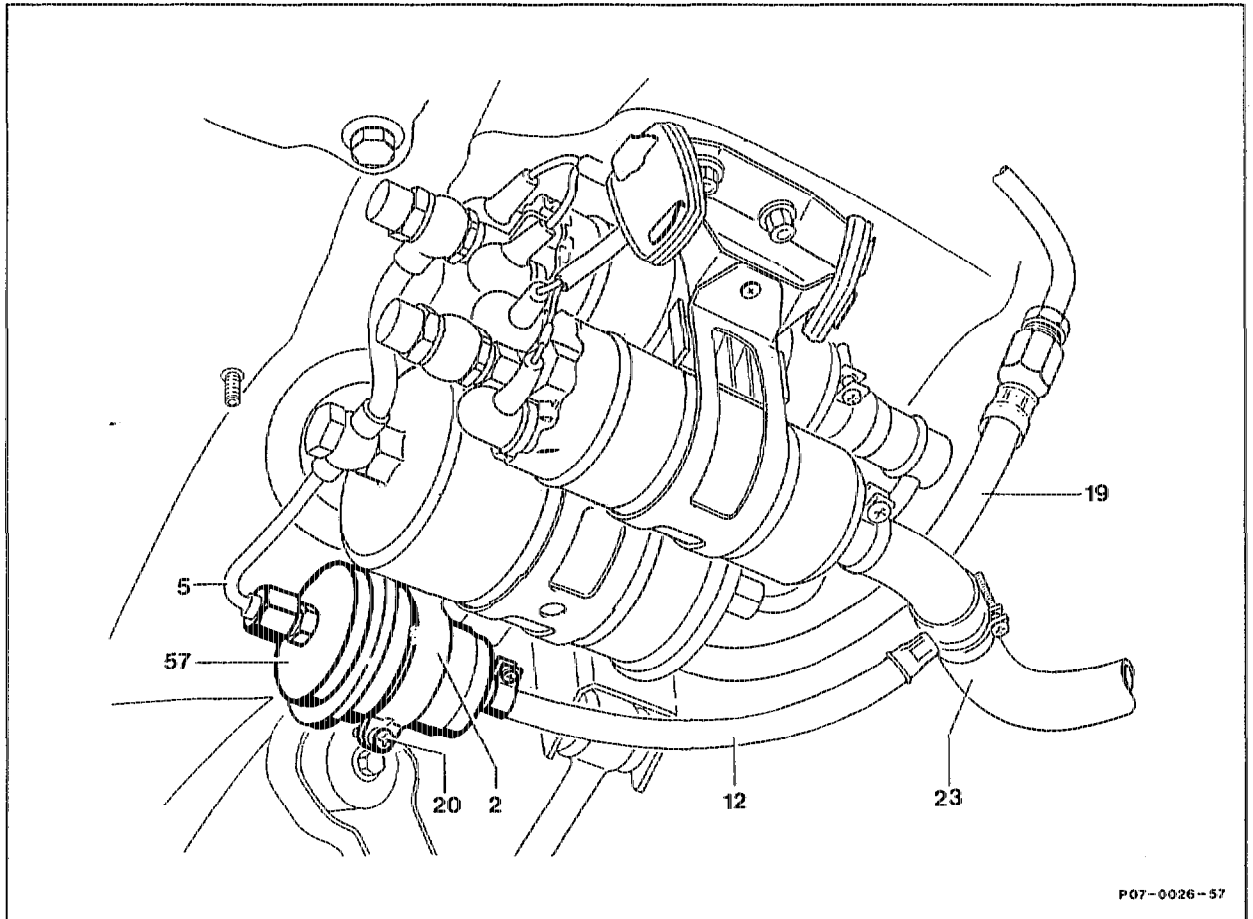

P07-0026-57



Pay attention to safety instructions!

Overpressure in fuel tank .....	release by opening pressure cap, closing.
Ground cable at battery .....	disconnect, connect.
Protective box .....	remove, install.
Fuel suction hose (23) and fuel pressure hose (19) .....	pinch with clamp 000 589 40 37 00, disconnect, connect, release clamp.
Fuel lines (5, 12) .....	unscrew from fuel accumulator (57), screw on. Collect remaining fuel.

- |  |   |
|--|---|
| Screw (20) .....                         | remove, screw in.   |
| Fuel accumulator (57) .....              | remove, install. Bend open tensioning strap (2) for this operation. |
| Leak test of all connection points ..... | check with engine running.  |

**Special tool**

