


## 07.3-1690 Removing and installing microswitch

Operation No. of operation texts and work units or standard texts  
and flat rates:  
07-1690

### Vehicles without ASR

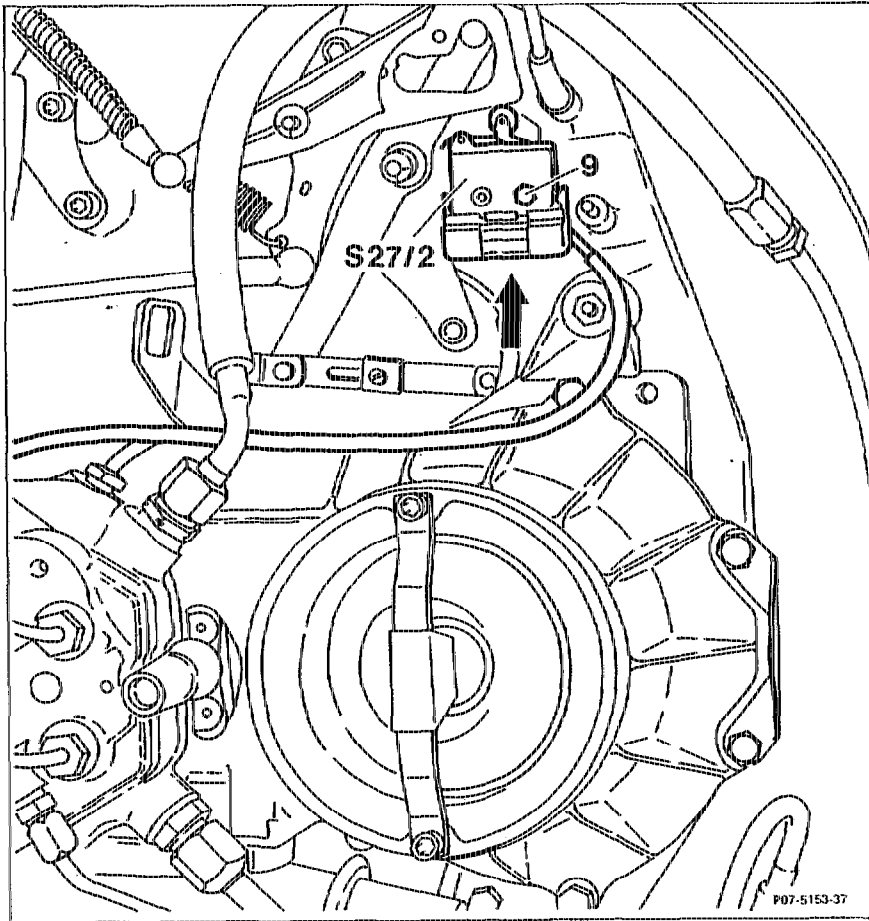

Electrical connector at microswitch (arrow) . . . . .	unplug, plug in.
Bolt (9) . . . . .	unscrew, screw in.
Microswitch (S27/2) . . . . .	take out, insert.