


07.3-1691 Removing and installing intake air temperature sensor

Operation No. of operation texts and work units or standard texts
and flat rates:
07-1691

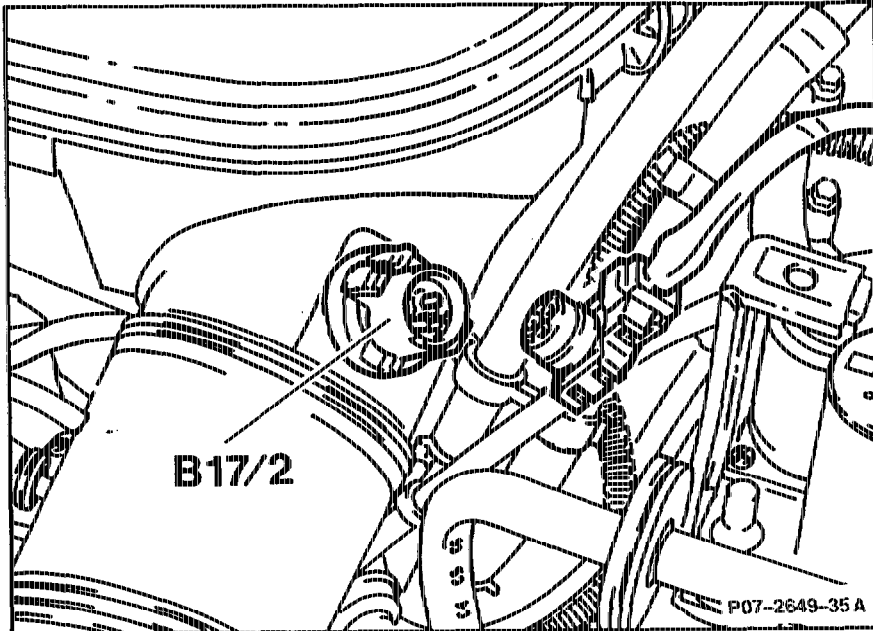

Electrical connector at intake air temperature sensor (B17/2)	unplug, plug in.
O-ring	check, renew if necessary.
Intake air temperature sensor (B17/2)	turn to left, withdraw, insert, turn to right.
CIS-E control unit fault memory	read out, erase if necessary (see Diagnosis Manual Engine, Volume 2, Index 0).

Note

Stored faults which may originate from test work resulting from cables being disconnected or from a simulation, must be erased in the fault memory after completing the work.