


07.3-2118 Removing and installing idle speed motor

Operation No. of operation texts and work units or standard texts and flat rates:
07-2118

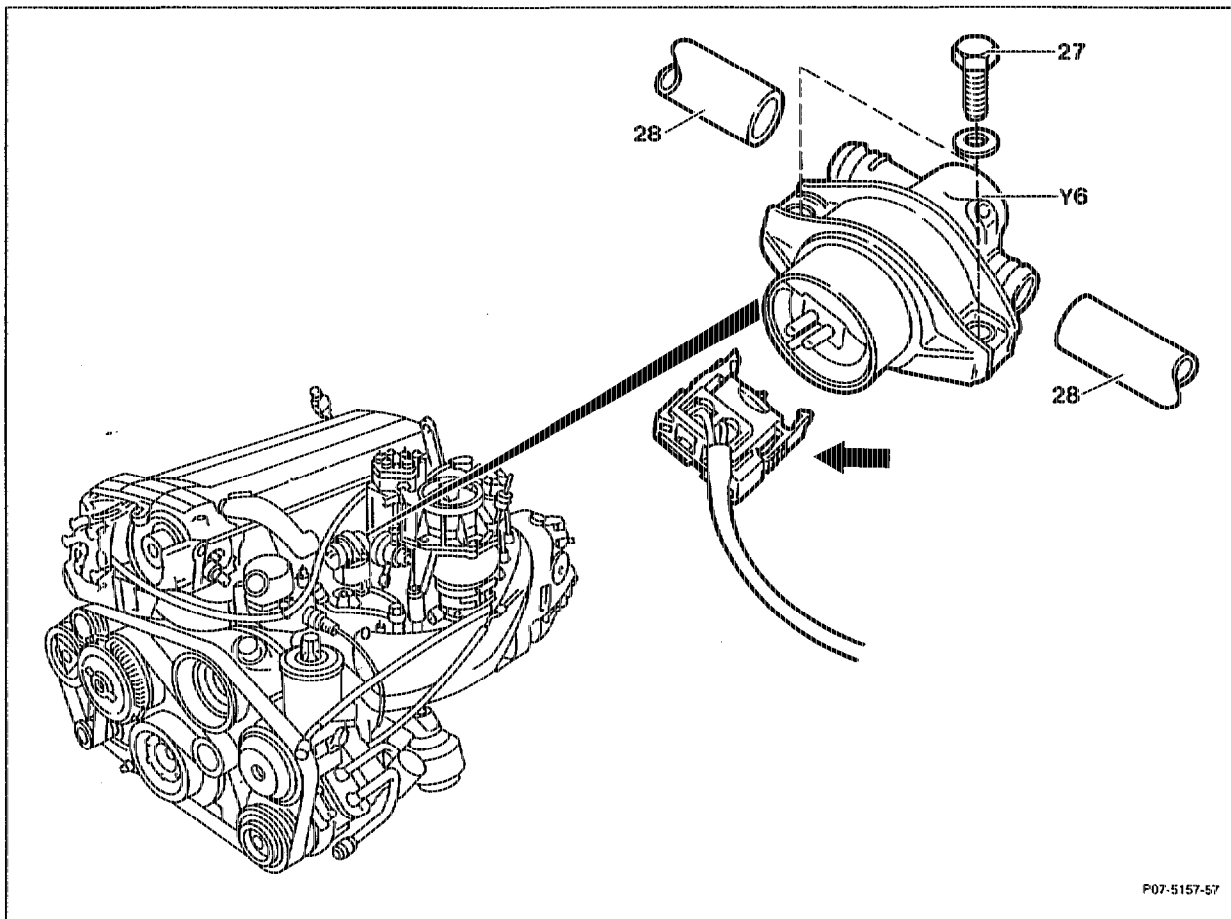

P07-5157-57

- | | |
|--|---|
| Electrical plug connection (arrow) | unplug, plug in. |
| Bolts (27) | unscrew, screw in. |
| Idle speed motor Y6 | remove, install by detaching shaped hoses (28), fitting on. |