
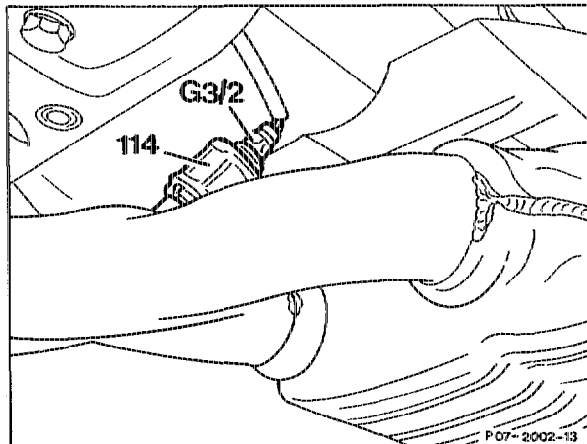


07.3-5303 Replacing oxygen sensor

Operation No. of operation texts and work units or standard texts
and flat rates:
07-5303

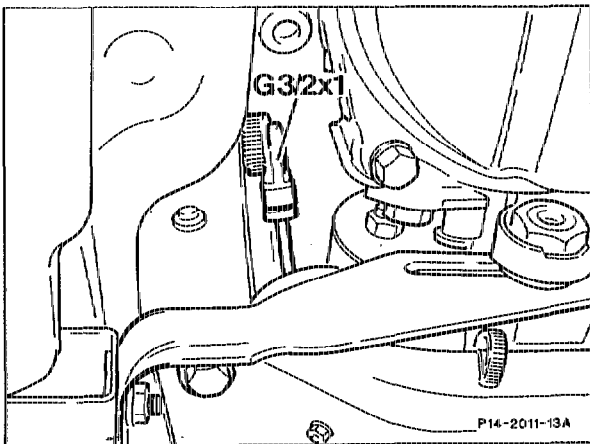

Oxygen sensor plug connection (G3/2x1) remove, install.

Note

- Turn union nut to the left
as far as stop → to open
- Turn union nut to the right
as far as stop → to secure

Splash water plate (114) pull off, fit on; open side should face to the rear.

Oxygen sensor (G3/2) unscrew with ring wrench socket
000 589 71 03 00, screw in.

Installation instruction

Coat thread of oxygen sensor (G3/2) with hot lubricating paste, Part No. 000 989 76 51.
Tightening torque 50 – 60 Nm as reference value.

Lambda control check, set
(see Diagnosis Manual Engine, Volume 1).

CIS-E control unit fault memory read out, erase if necessary (see Diagnosis Manual Engine, Volume 2, Index 0).

Note

Stored faults which may originate from test work resulting from cables being disconnected or from a simulation, must be erased in the fault memory after completing the work.

Special tool

