


15-2183 Replacing knock sensors

Operation No. of operation texts and work units or standard texts
and flat rates:
15-2183

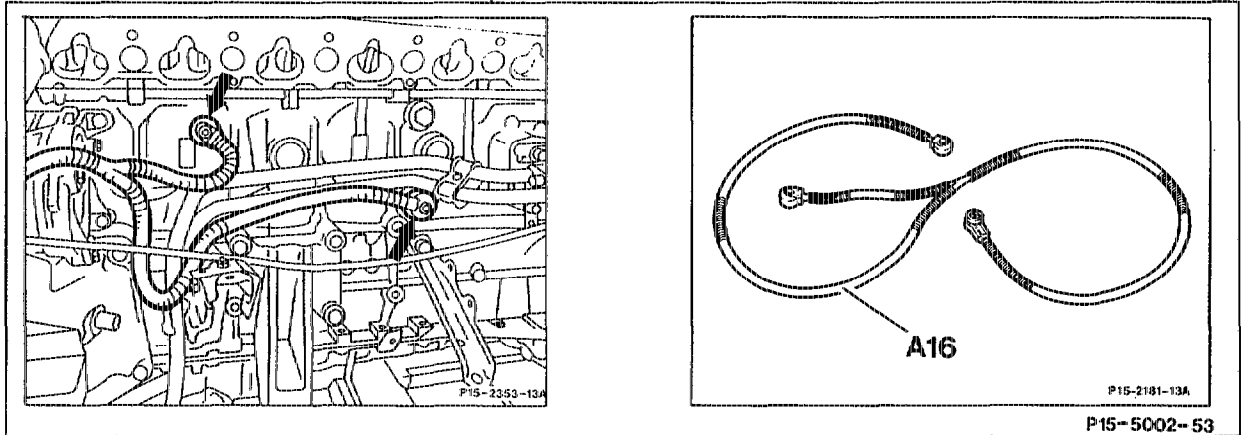

Screws (arrows)	unscrew, screw in.
	Tightening torque 20 Nm as reference value.
Connector at EZL/AKR control unit	unplug, plug in.
Protective hose for cables	unclip, clip in.

Note

The cables of both knock sensors (A16) are combined in the protective hose (corrugated hose). They can only be replaced as a unit.