


## 47-8212 Removing and installing charcoal canister

Operation No. of operation texts and work units or standard texts  
and flat rates:  
47-8212

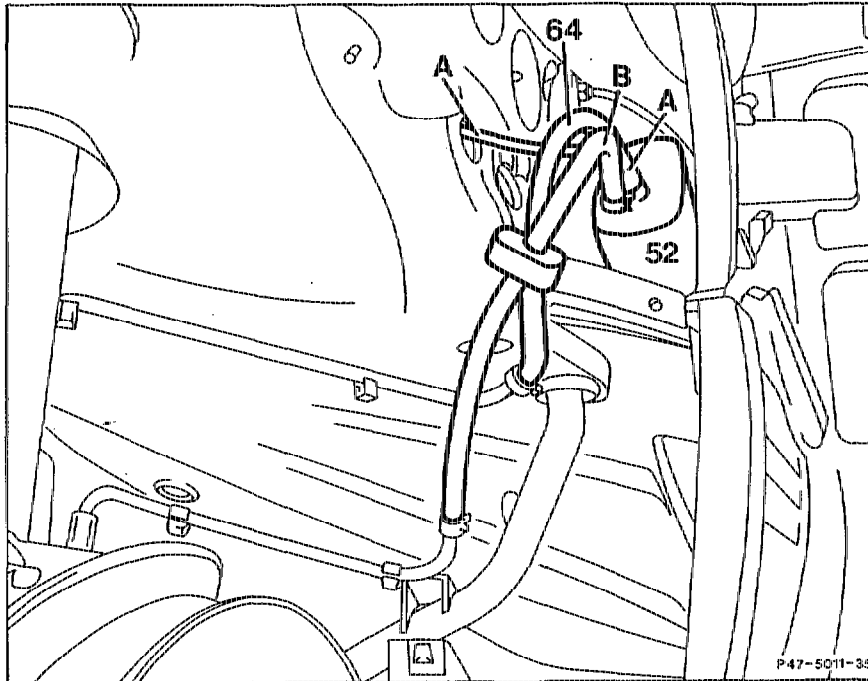

52	Charcoal canister	A	Regeneration line
64	Breather line	B	To fuel tank

Left front wheel	unscrew, screw on.
Interior lining in wheelhouse	Tightening torque of wheel bolts 110 Nm. remove, install.
Lines at charcoal canister (52)	detach, attach.
Charcoal canister (52)	withdraw upward, insert from above.