



F1

AR07.03-P-6522D

Removing and installing injection valves

9.2.95

ENGINE 104.94 /99, 111.920 /921 /94 /96 /970 /973 /974 /975 /977 (except , 104.990)

Shown on engine 104

16/7 Anti-twist lock

16/8 O-ring

16/9 O-ring

Y62 Fuel injection valve

Arrow Four-point lug

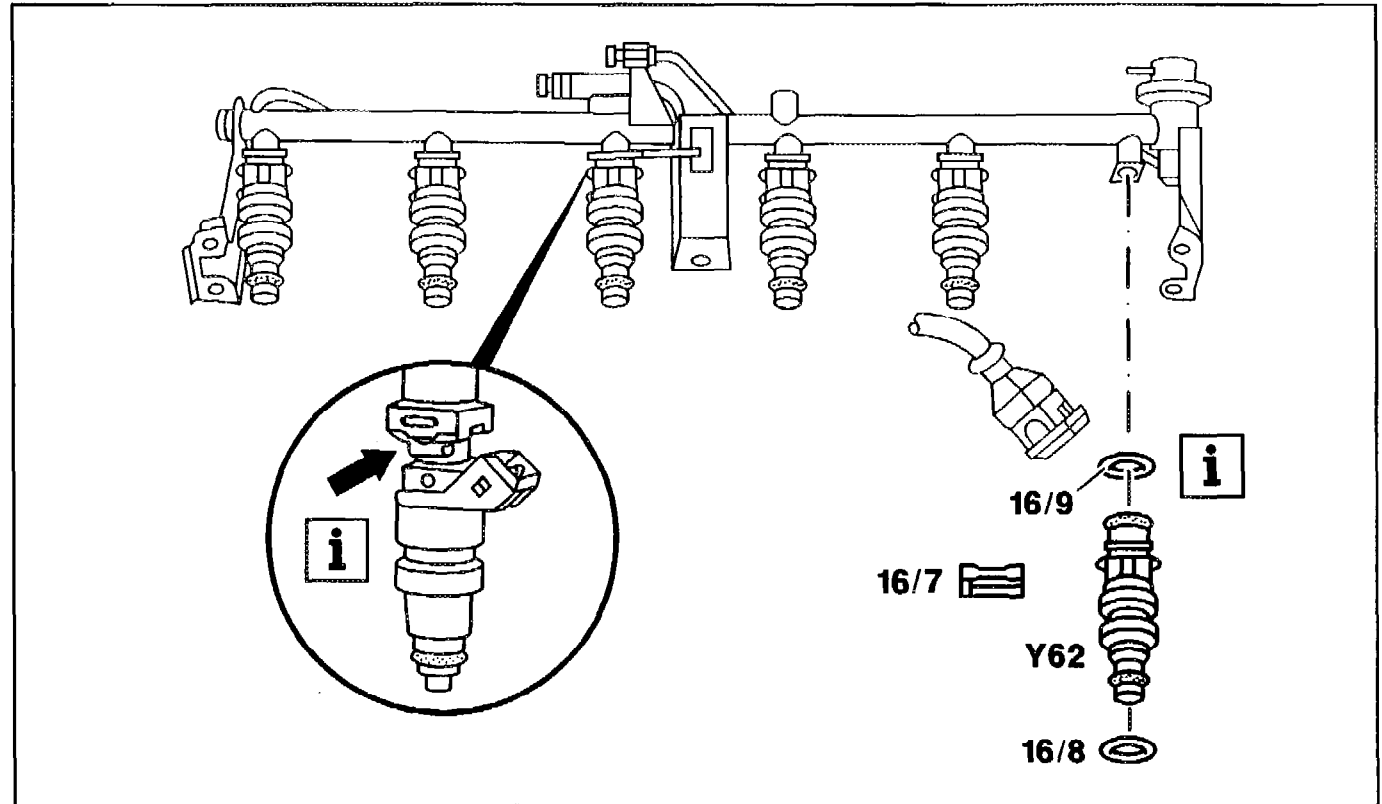




Fig. item, etc.	Work instructions		
i	Remove fuel rail together with injection valves, install		AR07.03-P-1450D B1
16/7	Anti-twist lock on injection valve	pull off i Installing: the anti-twist lock must engage in the four-point lug (arrow) on the injection valve (Y62)	
i 16/8, 16/9	O-rings	replace, Oil for installing.	