



H1

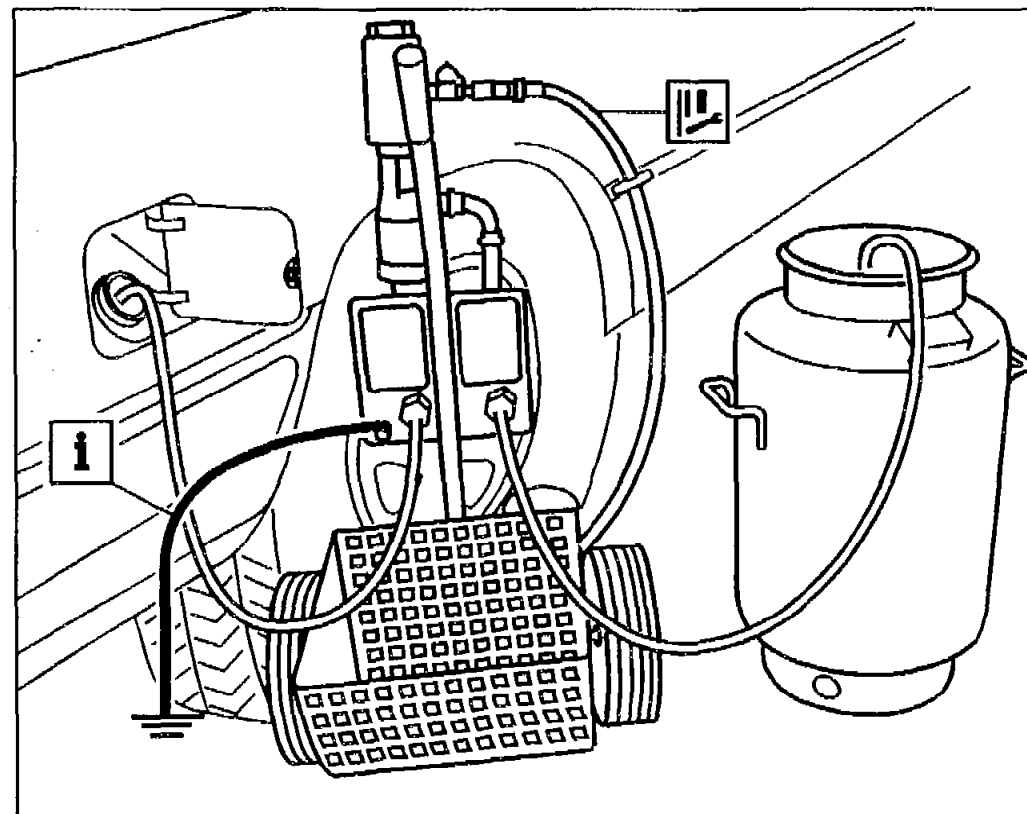
AR47.10-P-4001B

Draining and filling fuel tank




28.11.95

**MODEL 124, 129, 140, 170, 210, 220, 461, 463 (except, 129.067, 170.447, 210.065 /070 /082)
except CODE (494a) USA version
except CODE (808) Model year 1998**

Shown on model 210 (T-model)





 Danger!	Risk of explosion from ignition. Risk of poisoning from inhaling and swallowing fuel. Risk of injury as a result of fuel coming into contact with skin and eyes	No fire, naked flame or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel	AS47.00-Z-0001-01A D17
1	Connect extraction hose to suction side of extraction pump, disconnect	 Ground extraction pump! 	WH58.30-Z-1005-16A
2	Pump out fuel through filler neck into safety container		

Commercially available tools (see Workshop Equipment Manual)

Number	Designation	Make (e.g.)	Order number
WH58.30-Z-1005-16A	Suction master	Atlas - Copco Tools GmbH 4300 Essen 1	9749500050