



C4

AR14.30-P-7252F


## Removing and installing air pump belt pulley

22.6.94

**ENGINE 119.97, 120.98**


6 Belt pulley

7a Circlip

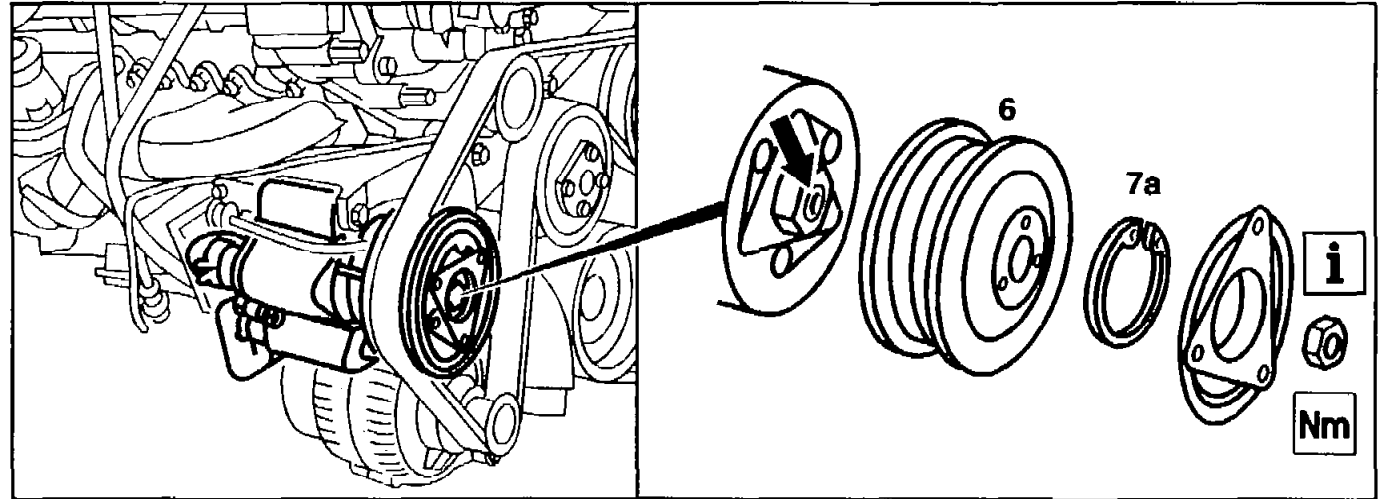

P14.30-0226-04

Fig. item, etc.	Work instructions		
	Remove poly V-belt, install	see Repair Instructions Engine Mechanicals II Engine 119 or Engine 120, Op. no. 13-3420	
 	Nut	counter-hold with hexagon socket (arrow) when screwing on	BA14.30-P-1001-01A
6 BT	Belt pulley Spacer ring of belt pulley	Engine 120.980	BT14.30-P-0001-01A <b>A18</b>

 <b>BT</b>	Diameter of air pump belt pulley modified	Engine 119.97	BT14.30-P-0004-01A	<b>B18</b>
--	---	---------------	--------------------	------------

 **Air pump**

Number	Designation		Engine 119	Engine 120
BA14.30-P-1001-01A	Nut of belt pulley to air pump	Nm	35	35