


N3

AR14.20-P-7662E


Removing and installing exhaust gas recirculation valve

20.7.94

ENGINE 119.97

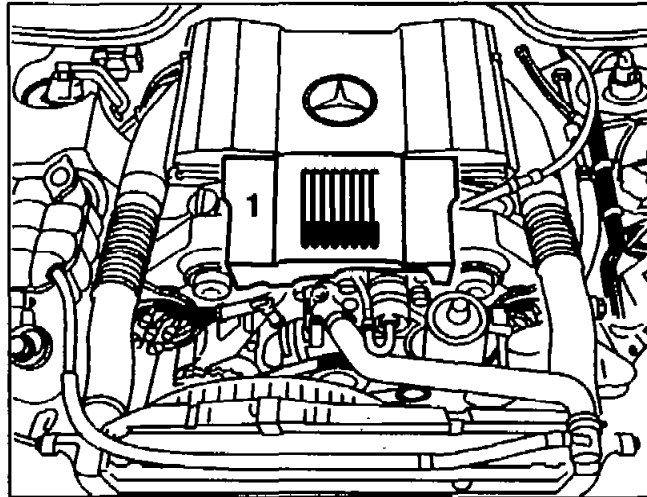

P14.20-0202-01

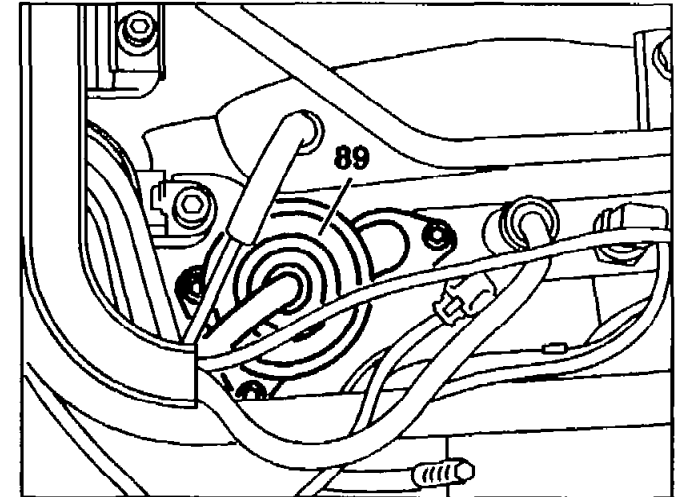

P14.20-0203-01

	<p>Removal, installation</p>		
<p>1</p>	<p>Remove cover (1)</p>		
<p>2</p>	<p>Detach vacuum hose (tr/vi/br)</p>	<p>Connection diagram of intake manifold</p>	<p>AR09.20-P-1310-01E N15</p>
<p>3</p>	<p>Remove exhaust gas recirculation valve (89)</p>	<p> replace gasket and self-locking securing bolts</p>	
<p>4</p>	<p>Install in the reverse order</p>		