




C5	AR15.12-P-2133E	Removing and installing crankshaft position sensor	11.8.94
----	-----------------	--	---------

ENGINE 119.97

L5 Crankshaft position sensor

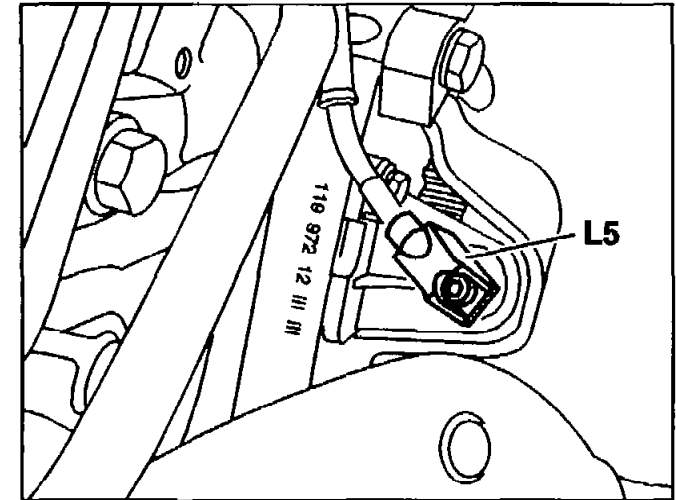

P15.12-0241-01

Fig. item, etc.	Work instructions		
L5	Crankshaft position sensor	pull off cover and take cable to DI/KSS ignition control module out of cable duct	