

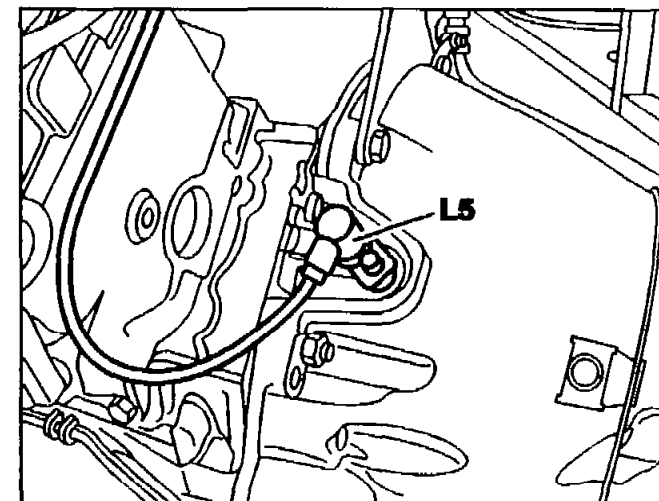


D5

AR15.12-P-2133EA

Removing and installing crankshaft position sensor

17.3.95

ENGINE 119.981/982/985

P15.12-0254-01

Fig. item, etc.	Work instructions		
L5	Crankshaft position sensor	unplug coupling and remove crankshaft position sensor	