




J5	AR15.12-P-2184EA	Removing and installing knock sensors	24.3.95
----	------------------	---------------------------------------	---------

ENGINE 119.981/982/985

Left knock sensor illustrated

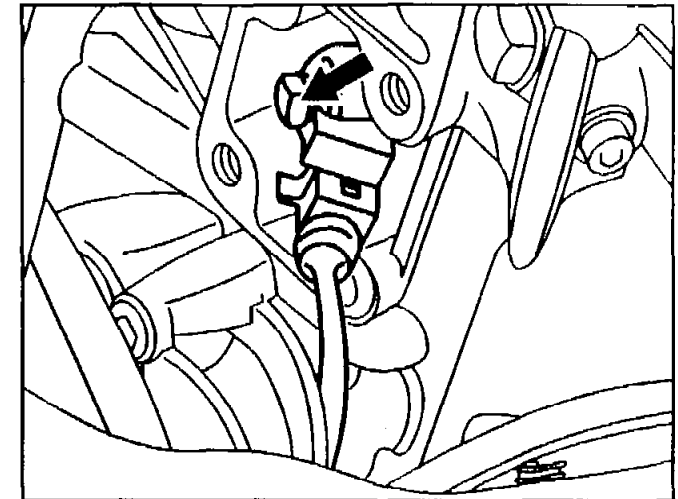

P15.12-0255-01

Fig. item, etc.	Work instructions		
i	Remove engine support, install	see Repair Instructions Engine 119.960/970/971/972/974/975 Mechanicals II Op. no. 22-2500	
i	Coupling	unplug knock sensor	
Arrow	Bolts		
Nm			BA15.10-P-1001-02A

**Nm** Knock sensors

Number	Designation	Engine 112, 113, 119, 120
BA15.10-P-1001-02A	Knock sensor to cylinder block	Nm 20