


22-2120 Removing and installing rear engine mount

Preceding work:

Open hood, raise to vertical position (01-0080).

Operation no. of operation texts and work units or standard texts
and flat rates
22-1160, 1168

A. Models 124, 140

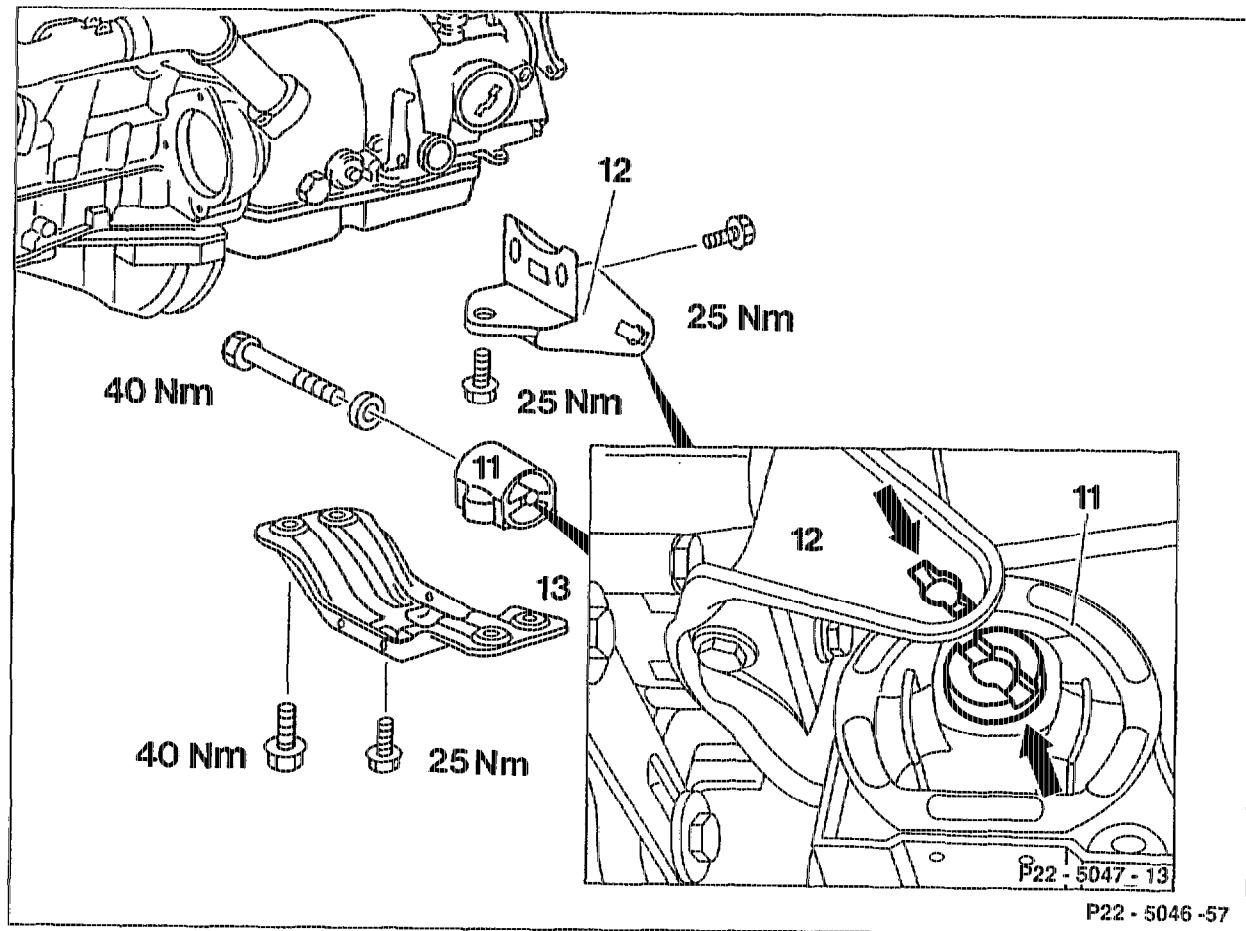

- Transmission support.
Cable straps of electric cable of kickdown at
engine carrier (13) detach, attach.
Engine carrier (13) remove, install (M8: 25 Nm; M10: 40 Nm).
Engine mount (11) remove, install (40 Nm).


Note

The installation position is fixed by a slot (arrow)
on the engine mount (11) and by a recess
(arrow) on the mounting plat (12).




B. Model 129

Operation no. of operation texts and work units or standard texts
and flat rates
22-1160, 1168

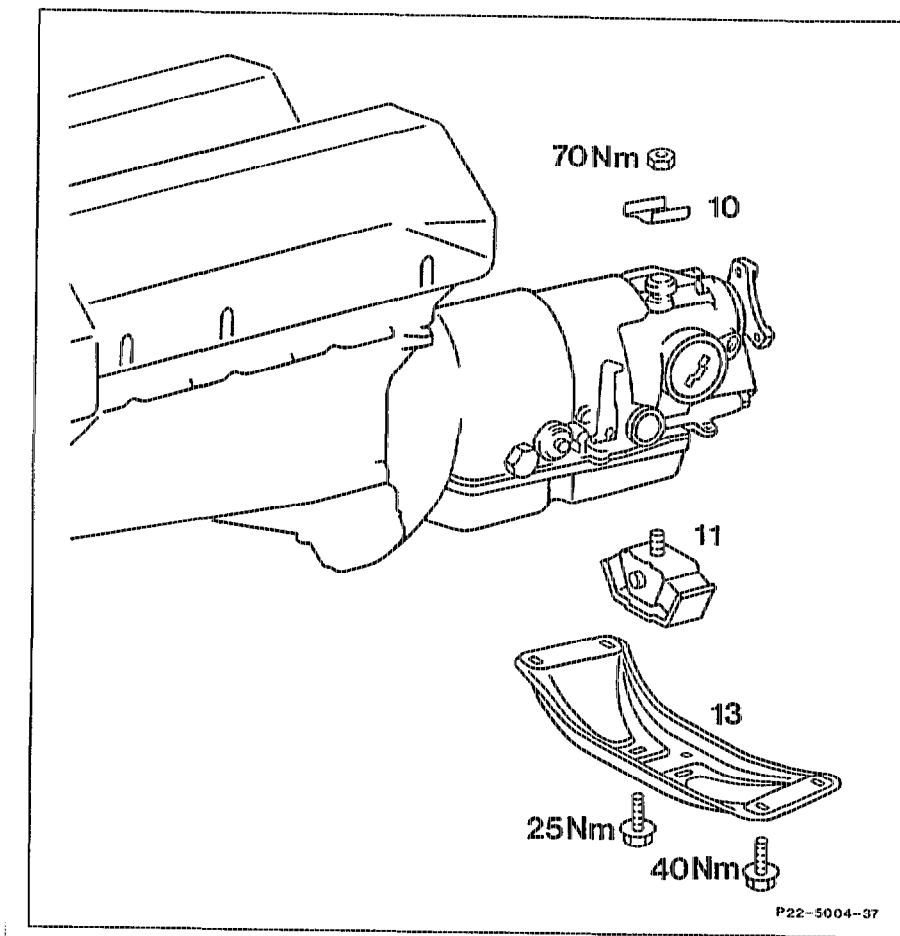


- | | |
|---|--|
| Transmission | support. |
| Cable straps of wiring of kickdown switch
and oxygen sensor at engine carrier (13) | detach, attach. |
| Engine carrier (13) | remove, install (M8: 25 Nm; M10: 40 Nm). |
| Engine mount (11) | remove, install (70 Nm). |
| Backing plate (10) | note. |

Special tool

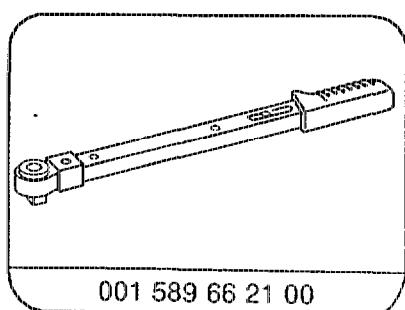

C. Model 210

Operation no. of operation texts and work units or standard texts
and flat rates
22-1160, 1168

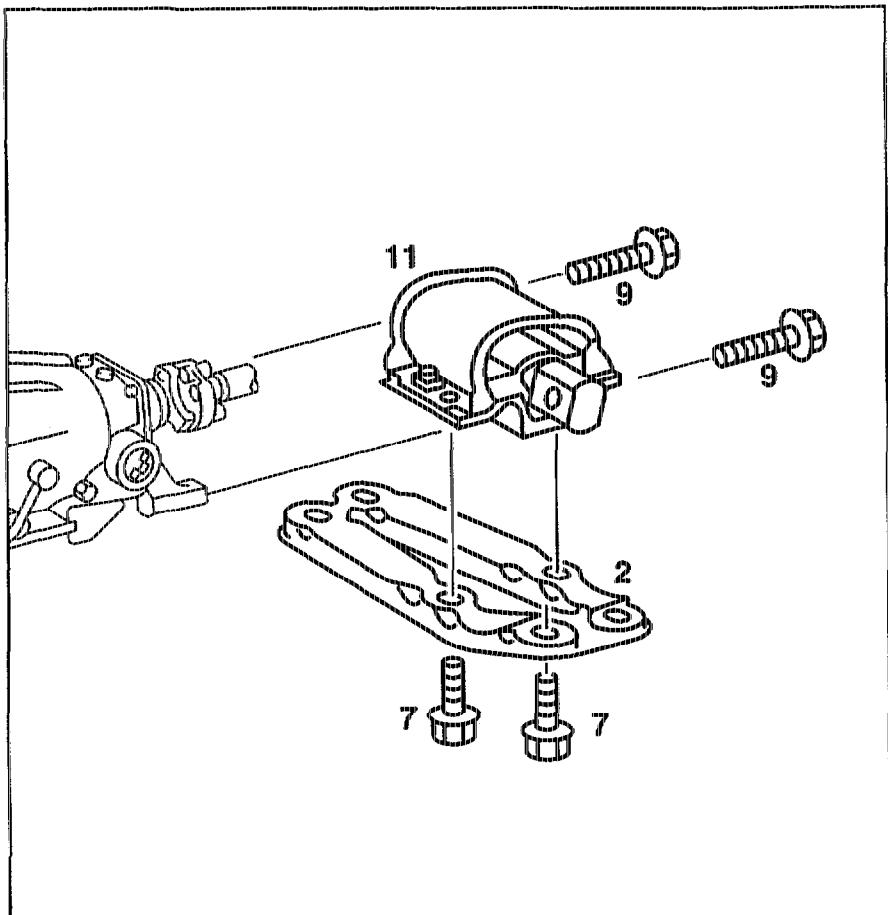

P22.10-0217-37

Transmission	support.
Engine mount (11)	remove, install (M8 25 Nm) (M10 40 Nm)