




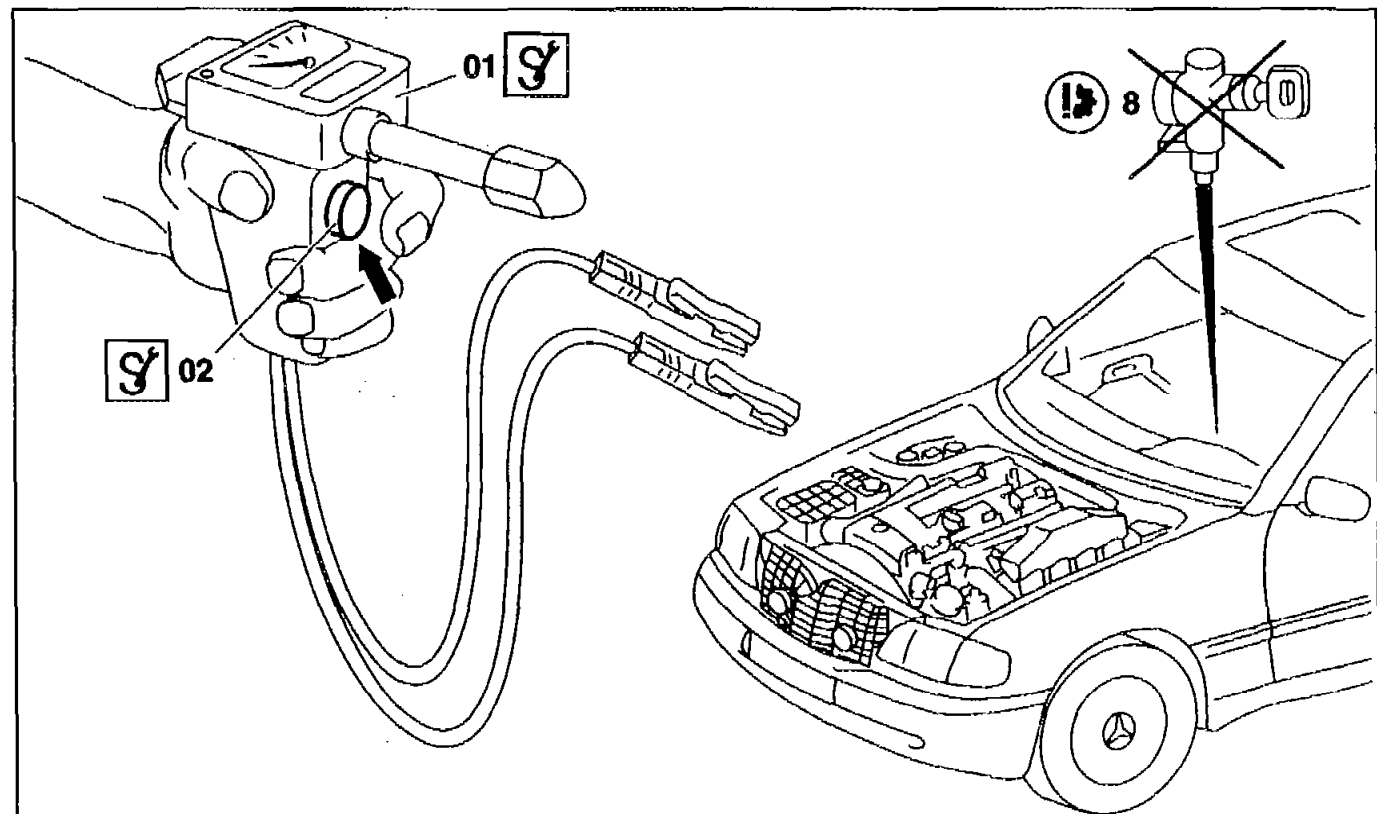
D3










AR01.10-P-0110B


Cranking engine with starter

ENGINE 604, 605 in MODEL 202**ENGINE 602.982, 604, 605, 606 in MODEL 210****ENGINE 602.983 in MODEL 461**

- 01  Compression pressure recorder
- 02 Contact switch
- 8 Ignition/starter switch




 	Removal, installation		
1	Switch off ignition	 Key in ignition/starter switch (8) in position 0.	
2	Connect compression pressure recorder	Engine 604, 605 in model 202 Engine 602.982 in model 210 Engine 604, 605, 606, in model 210  Compression tester  Adapter cable  Electrical connection set	AR01.10-P-0010-01A J14 AR01.10-P-0010-01HW L14 AR01.10-P-0010-01BG M14 001 589 76 21 00 124 589 36 63 00 201 589 00 99 00
 Danger! 3	Risk of accident as a result of vehicle starting off when engine running. Risk of injury as a result of bruises and burns if you insert your hands into engine when it is being started or when it is running. Crank engine	Secure vehicle to prevent it starting off. Wear closed and close-fitting work clothes. Do not grasp hot or rotating parts.  Do not crank engine at ignition/starter switch (8).  Press contact switch (02) for this step.	AS00.00-Z-0005-01A J17
4	Install in the reverse order		

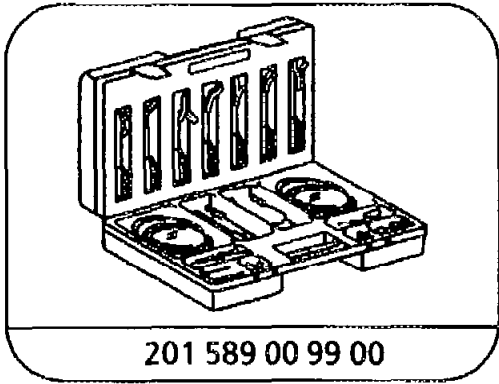


201 589 00 99 00

Electrical connection set

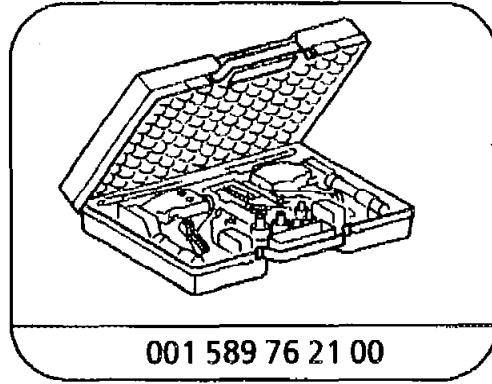

001 589 76 21 00

Compression tester

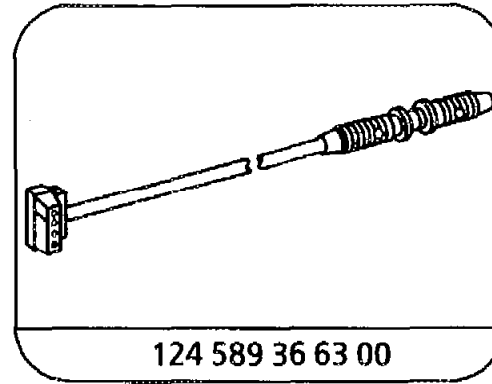

124 589 36 63 00

Adapter cable