


07.1-8638 Removing and installing microswitch at injection pump

Operation no. of operation texts and work units or standard texts and flat rates:
07-8638

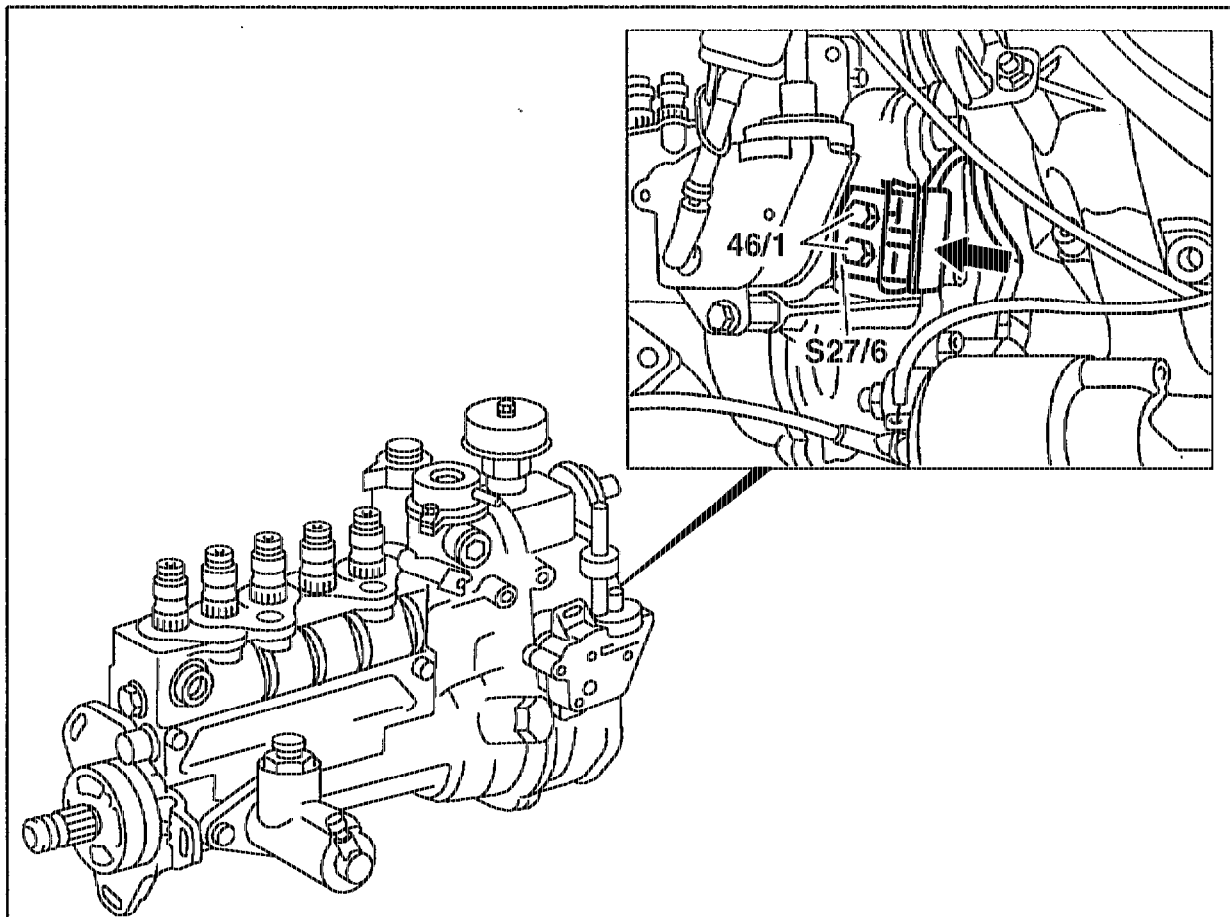

P07-6409-57

Engine 605.911

Air cleaner cross pipe remove, install (09-8031).

Engine 606.910

Resonance intake line remove, install (14-1984).

All models

Coupling (arrow) of microswitch unplug, plug in.
Bolts (46/1) unscrew, screw in.
Microswitch (S27/6) remove, insert.

Note

Check setting of microswitches, adjust if necessary (07.1-8317).