


15-4111 Removing and installing glow plugs

Operation no. of operation texts and work units or standard texts
and flat rates:
15-4111

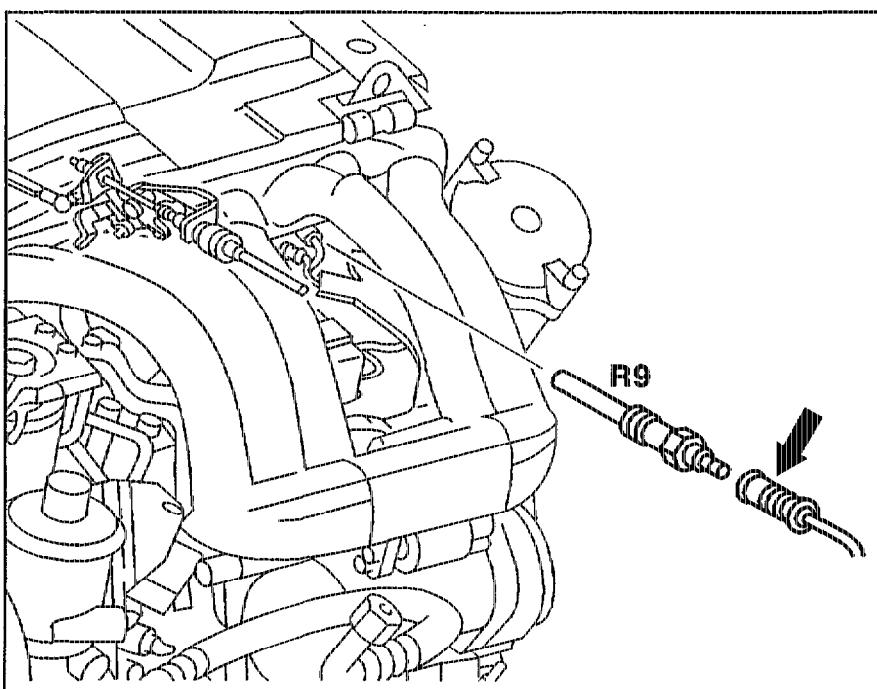

Shown on engine 605.910

Engine 605.911

Air cleaner cross pipe remove, install (09-8031).

Engine 606.910

Variable resonance intake manifold remove, install (14-1961).

All models

Coupling (arrow) at glow plugs (R9) unplug, plug in.

Glow plugs (R9) unscrew, screw in.
Tightening torque 20 Nm as reference value.

Commercially available tool

Designation	e.g. Make, order no.
Socket wrench insert	Stahlwille 02020012