


C18	WF00.00-X-1000Z	Shop-made tools	1.7.99
------------	-----------------	------------------------	---------------

WF58.50-P-0330-03A	Degrees scale for vibration damper	Engine 604-606	D18
WF58.50-P-0110-01A	Guard plate for radiator/condenser		E18
WF58.50-P-2020-01A	Connection fitting for automatic transmission fluid pipes	All engines	F18
WF58.50-P-0140-01A	Bar for knocking out steel ball of main oil gallery		G18
WF58.50-P-0145-01A	Spacer for engine supporting bar	Model 140	H18

D18 WF58.50-P-0330-03A	Degrees scale for vibration damper	Engine 604-606	
-------------------------------	------------------------------------	----------------	--

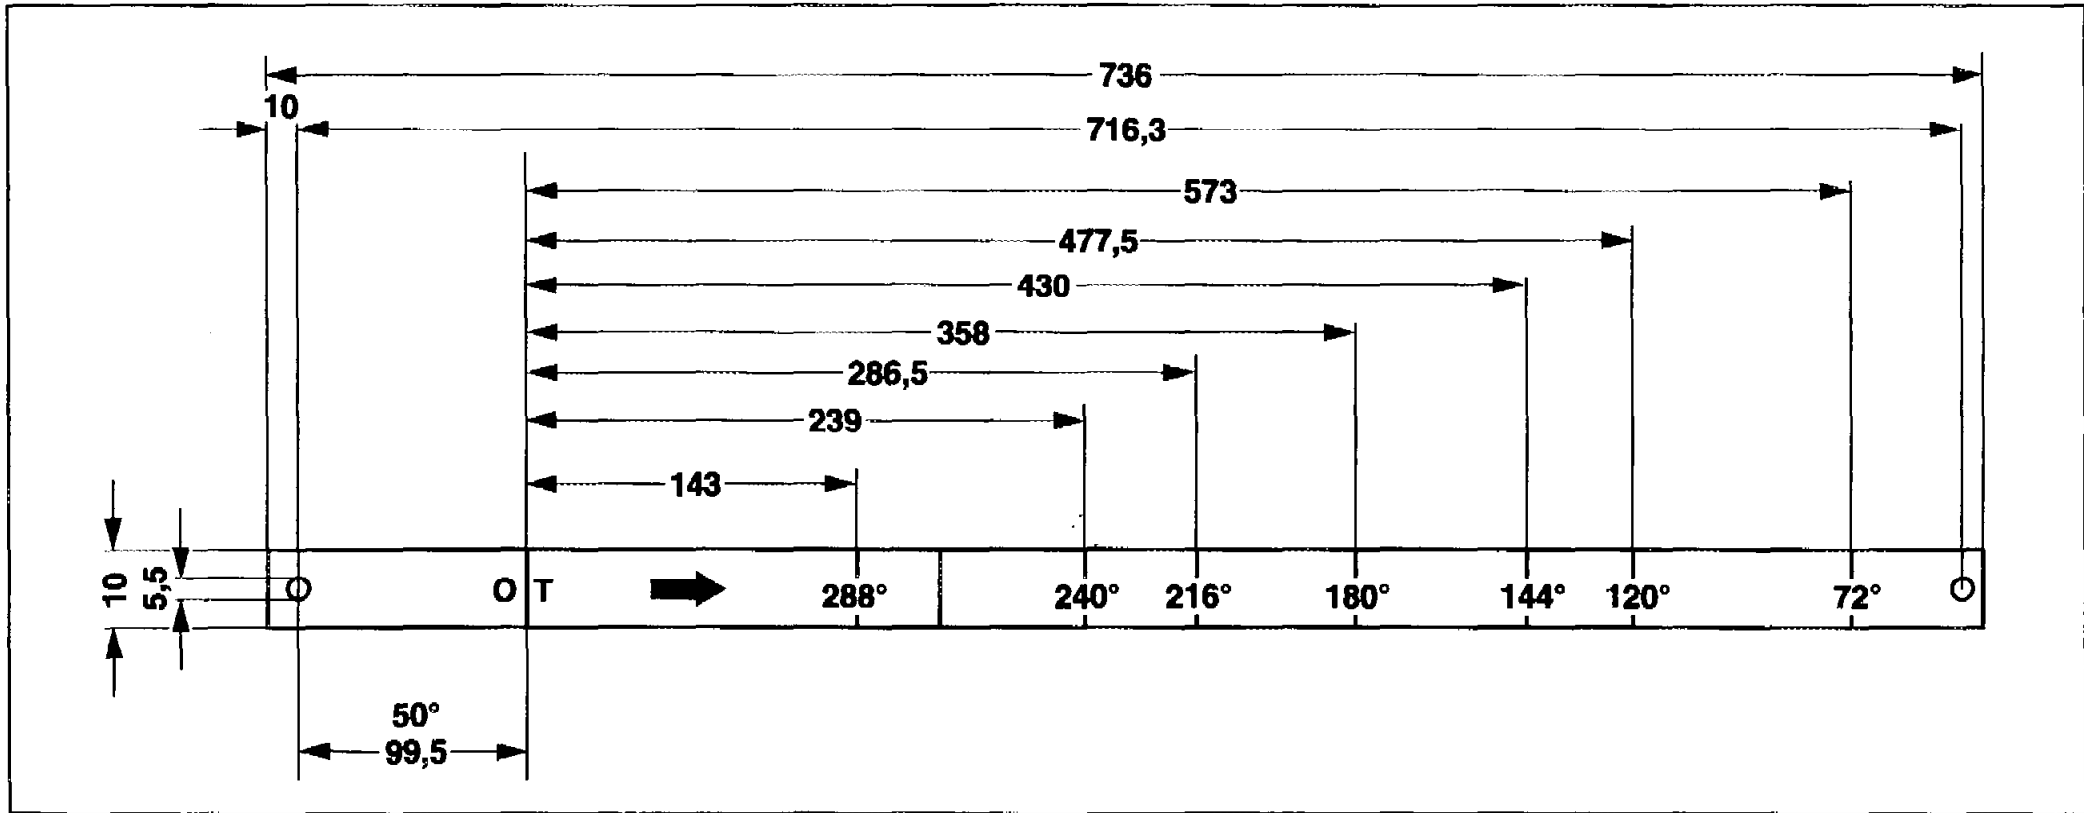


P03.30-2006-08

i

Use plastic tensioning strap; affix scale as shown in drawing.

Attach tensioning strap to vibration damper in pin for start of delivery measurement; pay attention to arrow indicating direction of rotation.



E18	WF58.50-P-0110-01A	Guard plate for radiator/condenser		 WF
------------	--------------------	------------------------------------	--	---

Shop-make guard plate from sheet metal or plastic with the approximate dimensions 400 x 680 x 1 mm.


Attach appropriate retaining bar to the plate for attaching it to radiator of condenser.



F18 WF58.50-P-2020-01A	Connection fitting for automatic transmission fluid pipes	All engines	 WF
-------------------------------	---	-------------	--


Shop-make double threaded union (01) for short-circuiting ATF feed and return pipes, e.g. from DIN parts.

Diameter of thread M14×1.5.

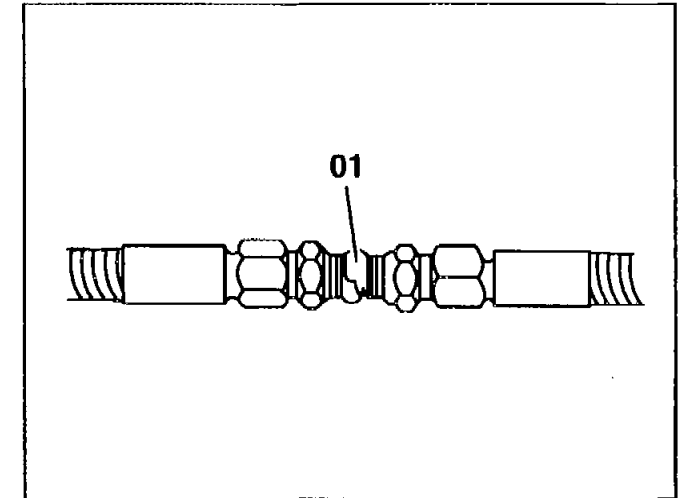

P20.30-0004-01




G18	WF58.50-P-0140-01A	Bar for knocking out steel ball of main oil gallery		 WF
------------	--------------------	---	--	---

Bar of 14 mm diameter and about 750 mm in length.



H18	WF58.50-P-0145-01A	Spacer for engine supporting bar	Model 140	 WF
------------	--------------------	----------------------------------	-----------	---

Wooden spacer with \varnothing 10 mm hole

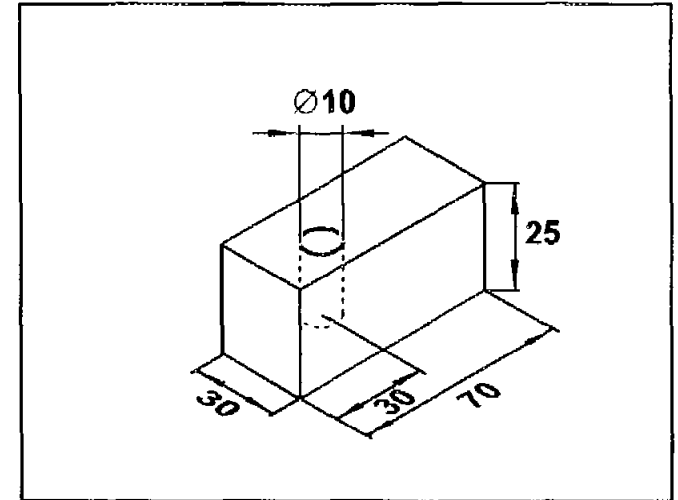

P01.45-0231-01