

All models




### WARNING!

Open expansion tank/radiator cap **only** at coolant temperatures **below 90°C**.

- Opening: Turn cap only to first detent to release excess pressure.
- Turn cap to second detent and remove cap from expansion tank/radiator.
- With coolant loss not caused by normal use determine the cause and repair on separate order.

Coolant level should be as follows:

- With cold coolant, up to mark on tank (arrow), or dividing line between black upper half and transparent lower half of reservoir.
- With warm coolant approx. 1 cm above mark.

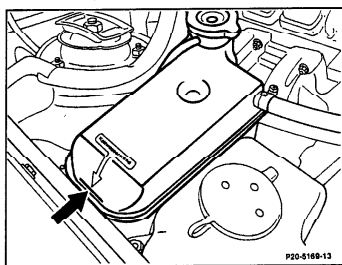

Check concentration of antifreeze/anti-corrosion protection. Top up only on separate order.

Use only approved antifreeze. Refer to Factory Approved Service Products list.