



All models

⚠ WARNING!

Apply parking brake before performing any work with engine running.
Place transmission selector lever in Park position.

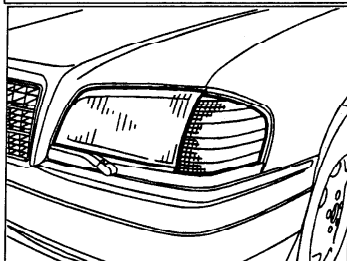

P82-6166-13

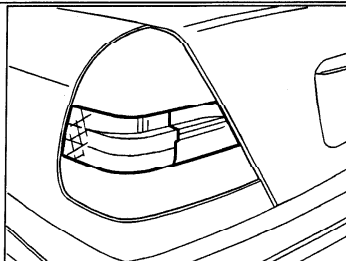

P82-6165-13

- Inspect lens head and tail lamps for damage.

Check operation of the following:

- Right and left side standing lamp
- Parking lamps/tail lamps/instrument lamps
- Low beam headlamps
- High beam headlamps and high beam indicator lamps
- Fog lamps/rear fog lamps and indicator lamp
- Stop lamp by depressing brake pedal.
- Backup lamps by selecting reverse gear.

- With key in ignition in position 0. Warning flashers and indicator lamp.