


83-637 Removal and installation of aspirator blower (M9) for temperature sensor interior air

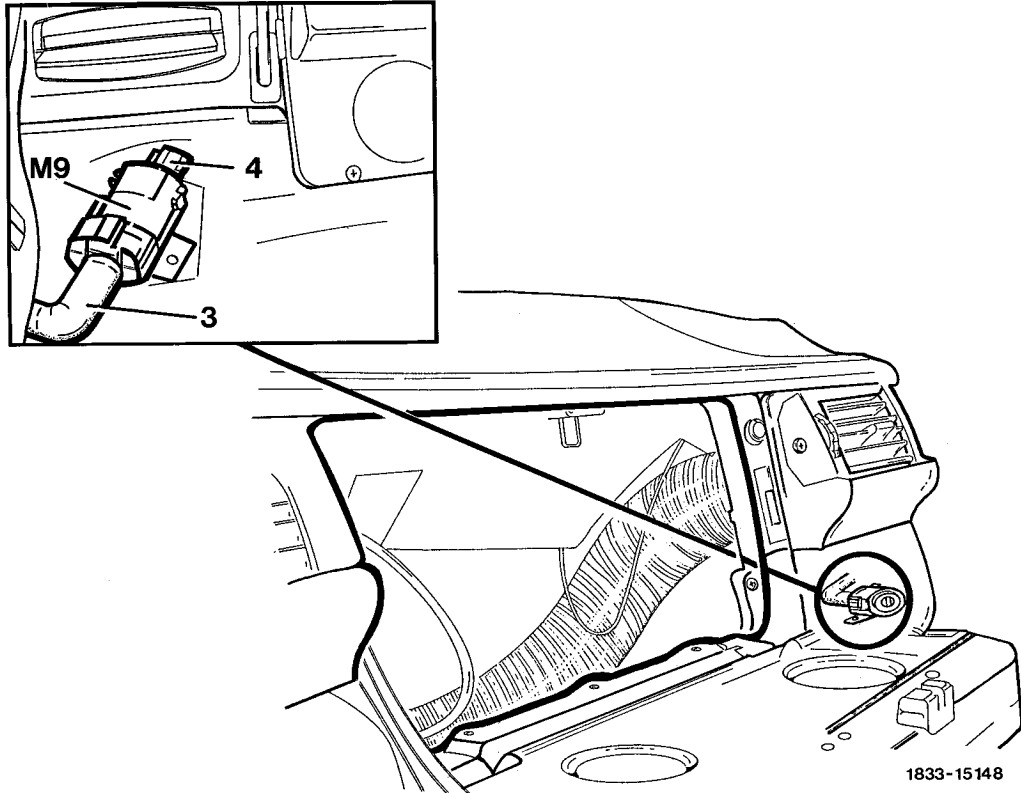

Glove box	Remove
Ventilation blower (M9)	Unclip from the holder, pull off hose (3) and 2-pole coupling (4)
In reverse order	Install
Function	Check by switching on the ignition and placing a piece of paper (approx. 1 cm ²) onto the grid of the temperature sensor interior air. The paper must stay in position.