



01-006 Removal and installation of noise capsule part at bottom of engine compartment

Operation no. of operation texts and work units or standard texts and flat rates
61-0105

Model 124

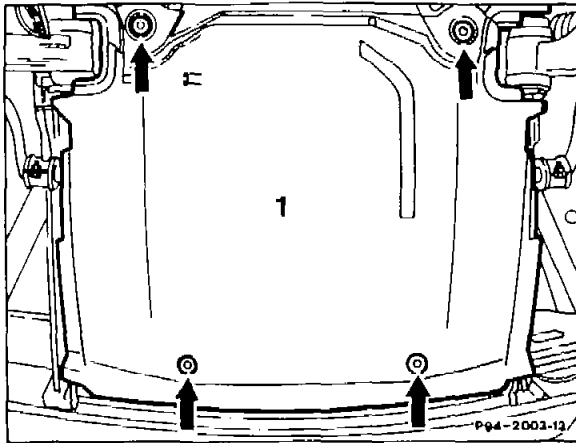


Noise capsule at bottom of engine compartment, front (1)

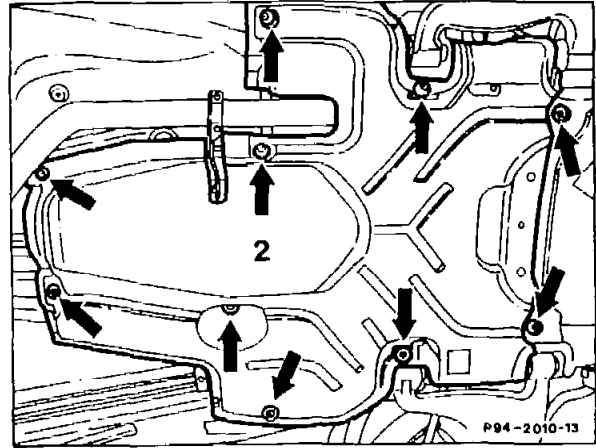


Noise capsule at bottom of engine compartment, rear (2)

Model 126

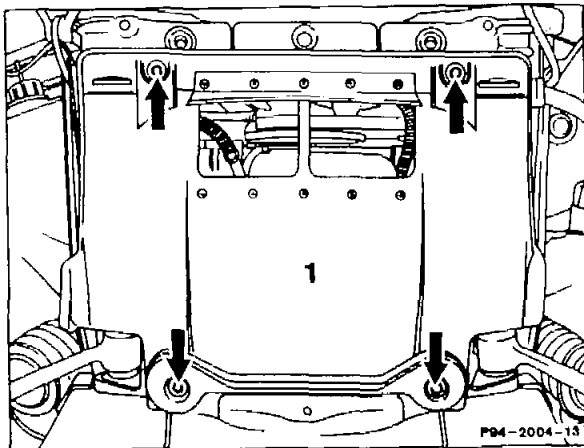


Noise capsule at bottom of engine compartment, front (1)

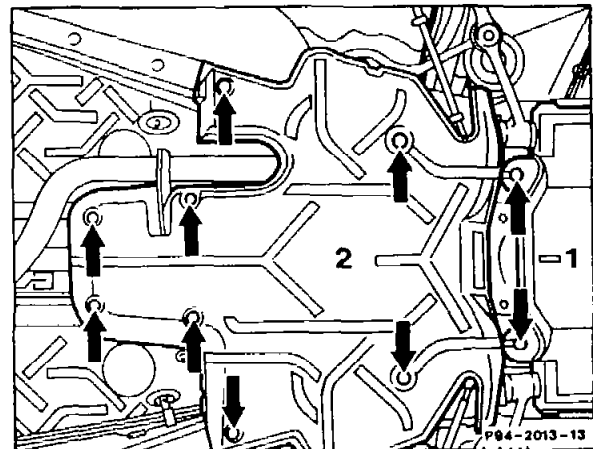


Noise capsule at bottom of engine compartment, rear (2)

Model 140

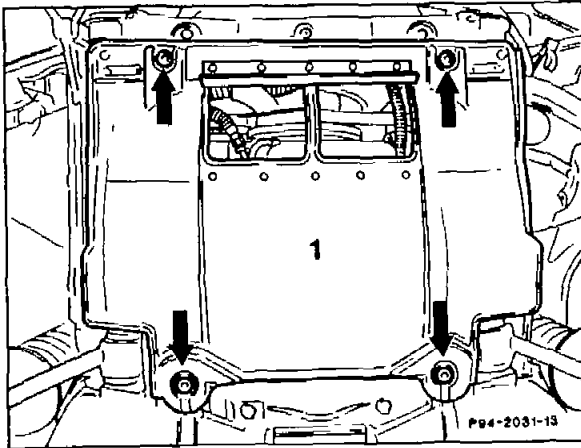


Bottom part of center noise encapsulation

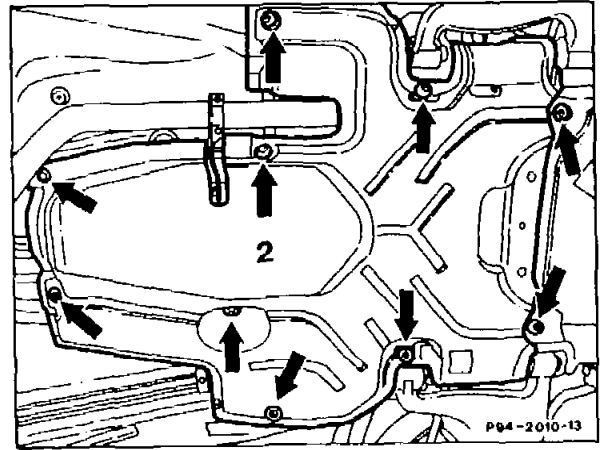


Bottom part of rear noise encapsulation

Models 201, 202

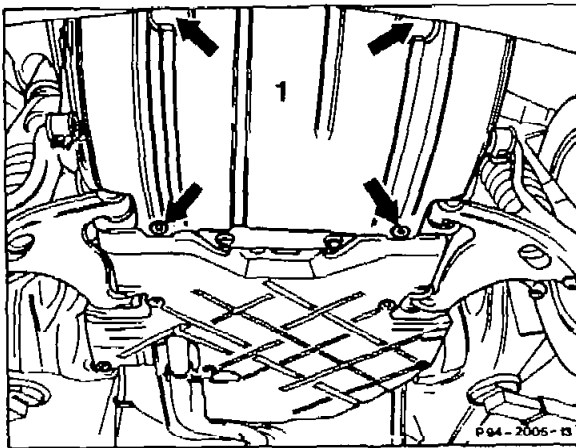


Bottom of front noise encapsulation (1)

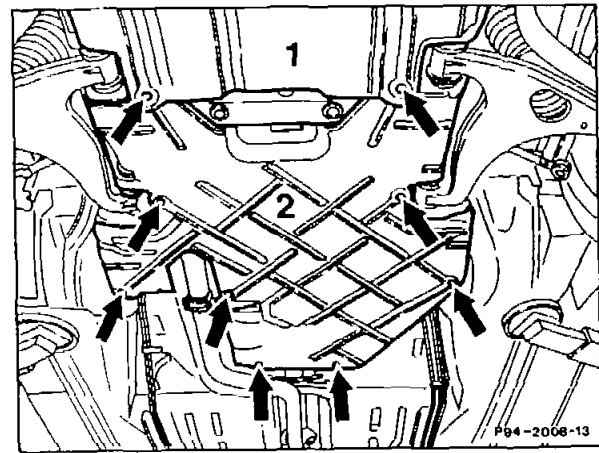


Bottom part of rear noise encapsulation (2)

Model 210

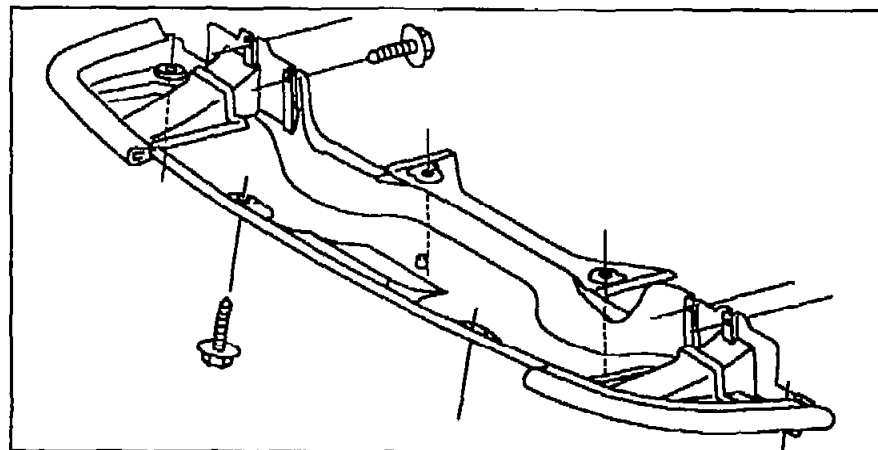


Bottom part of front noise encapsulation

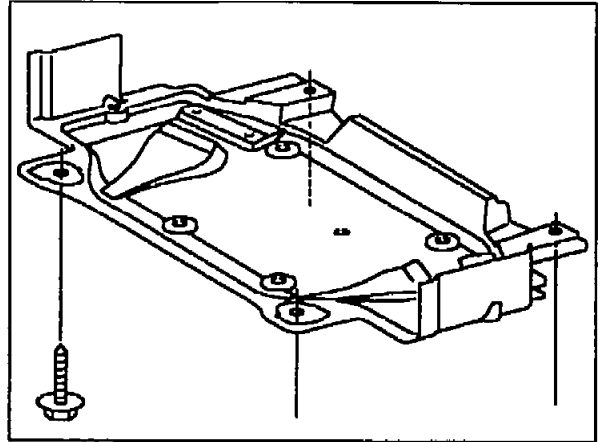

P61.20-0214-13

Bottom part of center noise encapsulation

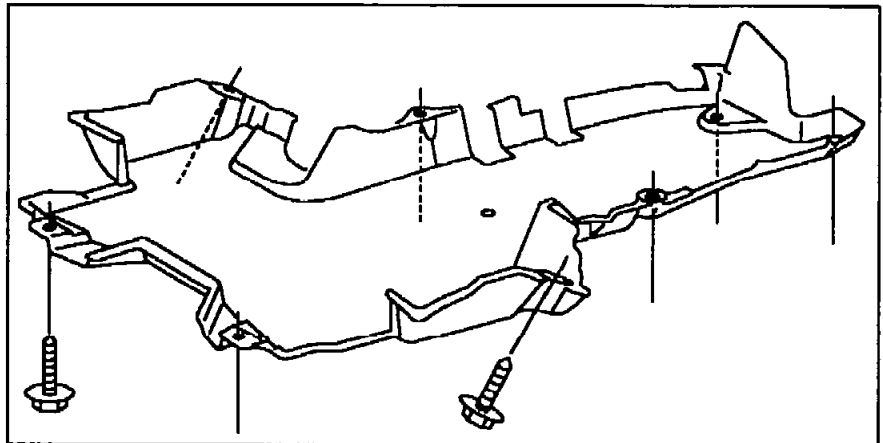

P61.20-0215-33

Bottom part of rear noise encapsulation

Engine compartment panel remove self-tapping screws, insert and take off panel, attach.

Note

Attach engine compartment panels so that the edges of the side panels are placed over the bottom panels.