


ENGINE 602.96, 603.96

Oil is supplied to the turbocharger from the clean oil gallery in the crankcase and by an oil feed line (A) connected at that point.

The oil return flow (B) is likewise located on the right-hand side of the crankcase and is directly connected through the oil pan.

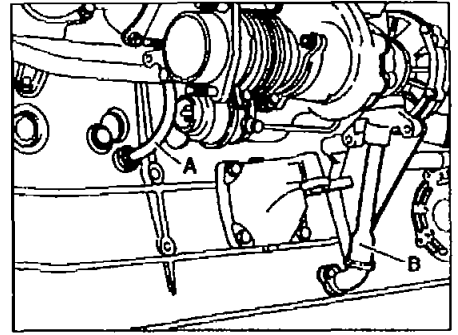

P18.40-0284-01