


22-213 Adjusting engine stop, model 124 4MATIC

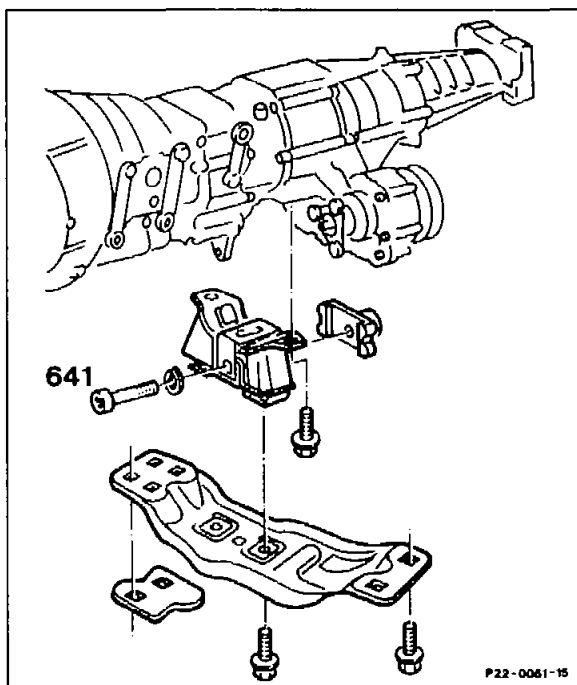

- | | |
|--------------------|---|
| Screw (641) | slacken. |
| Start engine | blip accelerator pedal several times so that the engine stop adjusts. |
| Screw (641) | tighten, 45 Nm. |

Special tool

