


22-215 Removing and installing front engine stop

Preceding work:
Bottom engine compartment lining removed (01-006).

Operation no. of operation texts and operation values or standard texts and flat rates 22-210

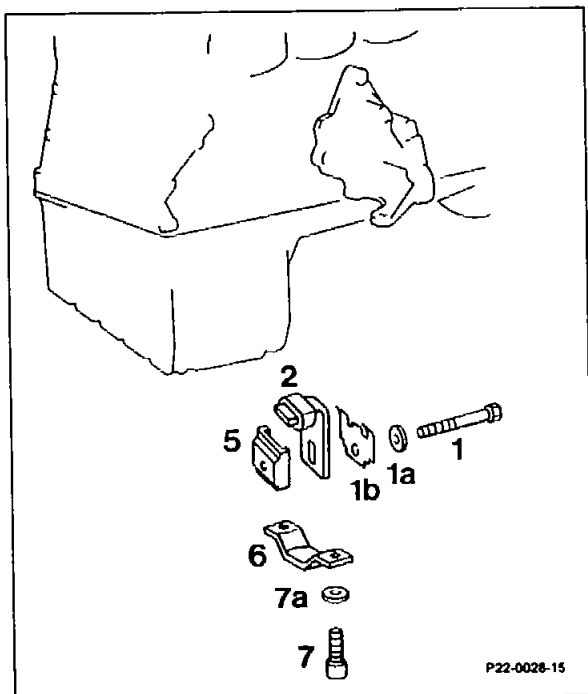

Adjusting bolt (1) unscrew, screw in, 130 Nm.

Note

Adjust engine stop (22-220).

Hexagon socket screws (7) unscrew, screw in, 25 Nm.

Bracket (6) and engine stop (2) take off, attach.

Tightening torques

Nm

Hexagon socket screws, engine stop bracket

25

Adjusting bolt

130

Special tools

