


All models

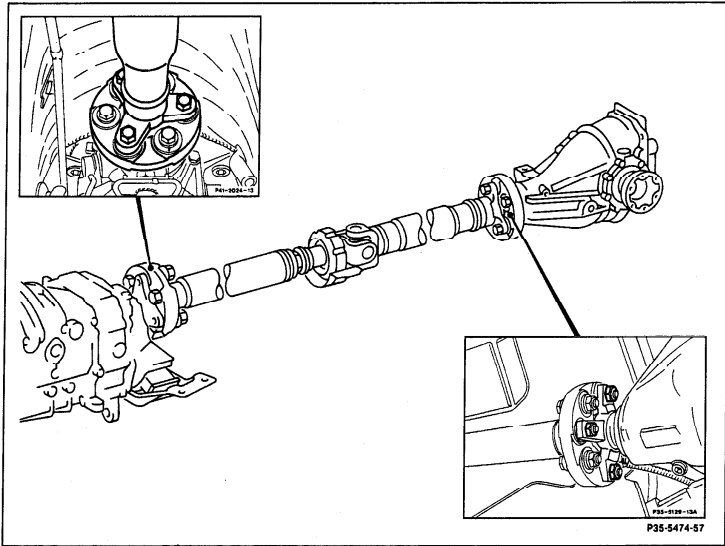

- Check flexible coupling for wear and damage, as well as for distortion (visual inspection).
- Replace flexible coupling or vibration damper if damaged or worn.

4152

Inspecting drive shaft flexible coupling

Note:

On those flexible coupling mounted at the transmission end, that are radially soft (soft in thrust) and tangentially soft (soft in thrust and tension), check the lands in the area of the dowel sleeves (arrows) for cracks (visual inspection).

If distortion is found, loosen and retighten drive shaft. If distortion remains, replace flexible coupling.

