



## Removing and installing engine compartment lower panel **6190**

Models 124.0 129 140


- Unscrew small bolts (arrows) and remove engine compartment lower panel.
- Install in reverse sequence.

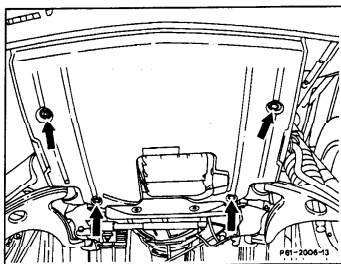

Model 124 Engine compartment lower panel, short version

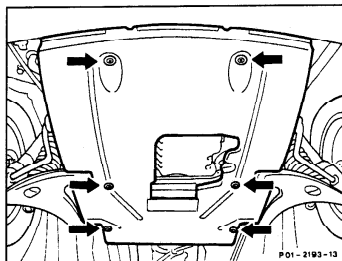


Model 124 Engine compartment lower panel, long version

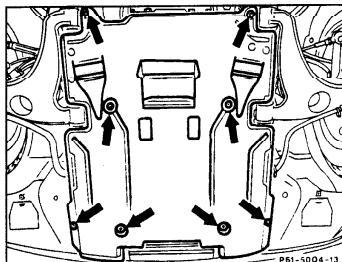


Model 124.036


# 6190 Removing and installing engine compartment lower panel

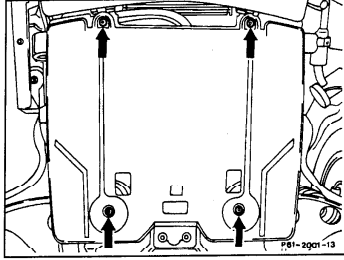

Model 129

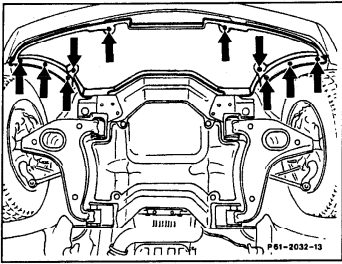

Model 140 front section

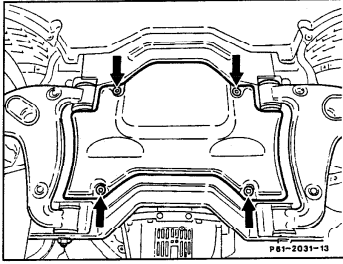

Model 140 rear section


## Removing and installing engine compartment lower panel

# 6190

### Models 124.036, 140


Install lower engine compartment cover (1) so that it overlaps the wheel well covers (2).

Model 124.030

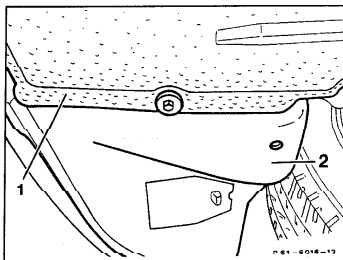

### Models 124 (except 124.036), 202

Install the side panels so that the edges overlap the engine compartment cover.

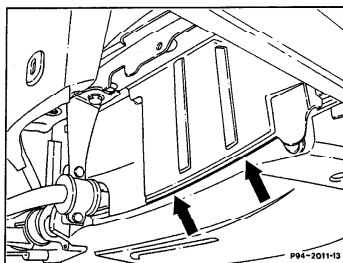

### Model 129

Install lower engine compartment cover (1) so that the side panels (3) are positioned inside the lower engine compartment cover.

