 
 
 
 




### Special tools




- Remove windshield wiper assembly (job no. 82-680).
- Remove water collector (4 screws).
- Cover dust filter with protective cover 140 589 00 98 00.

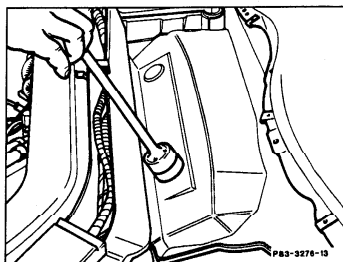

- Remove 5 screws (3) and lid.
- Remove lid inside heater box (5 screws).

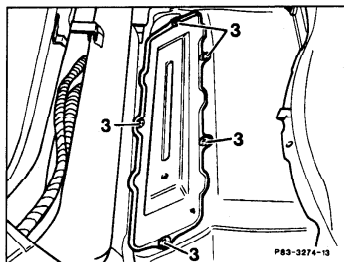


- Using vacuum/pressure tester, apply vacuum to pneumatic seal of active charcoal filter.
- Pull active charcoal filter up (tester remains connected)
- To install, apply vacuum to seal on new filter and insert in opening with pneumatic seal facing toward front of vehicle.
- Remaining components are installed in reverse order of removal.

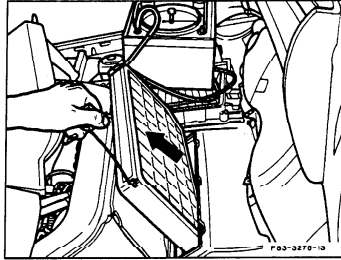

**Note:**

The active charcoal filter can not be cleaned.

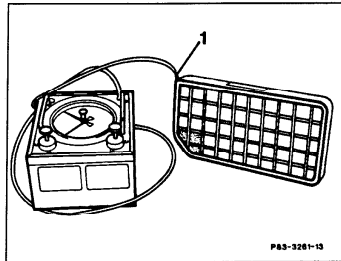

Vacuum connection (1)