

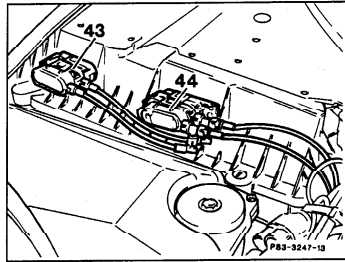


- Pull out rubber lip seal (arrow).
- Disconnect pneumatic lines from main air flap actuators (43, 44).
- Remove 6 screws (3) and lift air plenum (2).

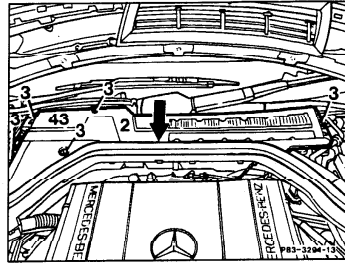

- Pull out temperature sensor (B10/5).

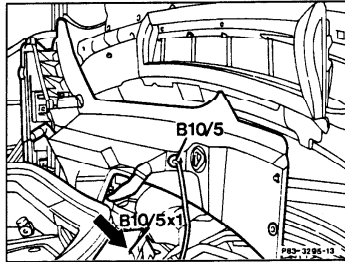


- Lift cover and lift filter cartridge out.
- Clean filter housing and cover.

Note:

Do not attempt clean dust filters, they should only be replaced.


- Install new dust filter (1) according to illustration.

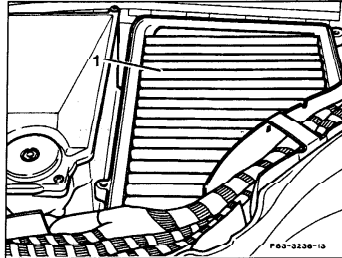

Note:

On vehicles equipped with active charcoal filter, the dust filter is designed as a active charcoal prefilter. The underside of the filter has a layer of active charcoal. Do not install the simple dust filter intended for vehicles without the active charcoal filter.

Dust prefilter for vehicles equipped with active charcoal filter system

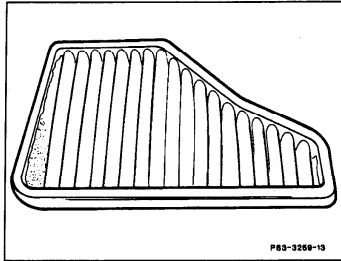

Dust filter for vehicles not equipped with active charcoal filter system

