

**Model 107 starting 08.1985**  
**124**  
**126 starting 09.1985**  
**129**  
**140**  
**201 starting 01.1985**

 **Warning!**

Open the expansion tank/radiator cap **only** at coolant temperatures **below 90°C**.

- Opening: Turn cap only to first detent to release pressure.
- Turn cap to second detent and remove cap from expansion tank/radiator.

Coolant level should be as follows:

- Up to mark printed on tank (arrow).
  - With warm coolant approx. 1 cm above this mark.
- 
- If coolant loss is excessive, determine the cause and repair on separate order.

