



All models

- Fuel filler well drain

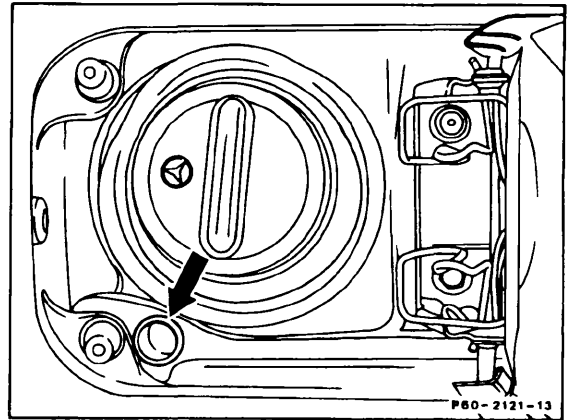


- Fuel filler well, drain outlet

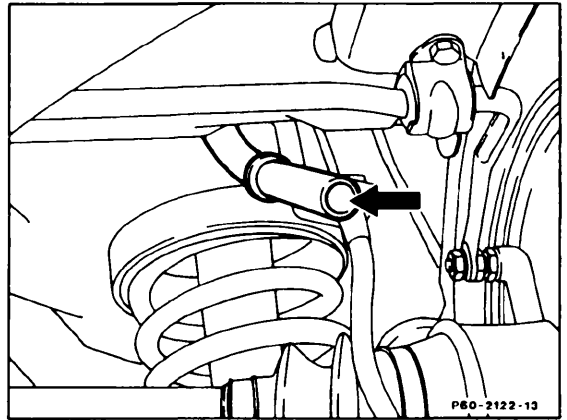


Model 107, 123, 124, 126, 201

- Rear fender

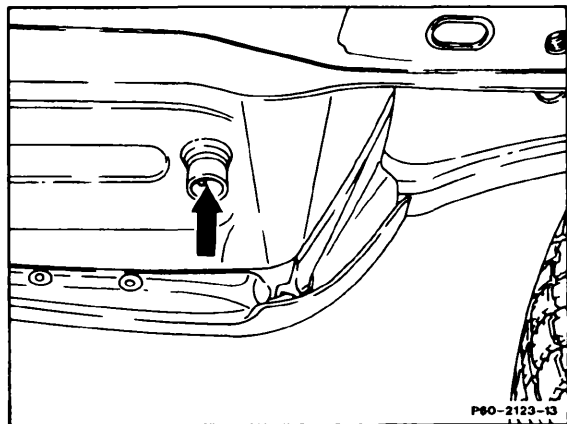


Model 107, 123, 124, 126, 140, 201

- Rear fender
- Fuel filler well, drain outlet

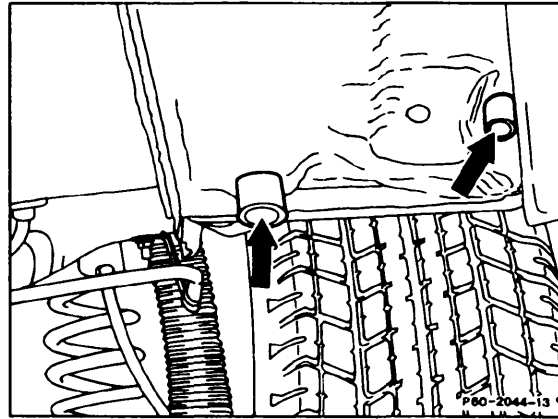


Model 129

- Spare tire well

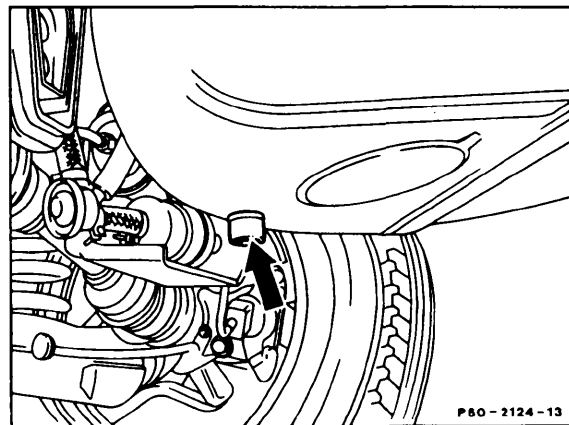


- Side member

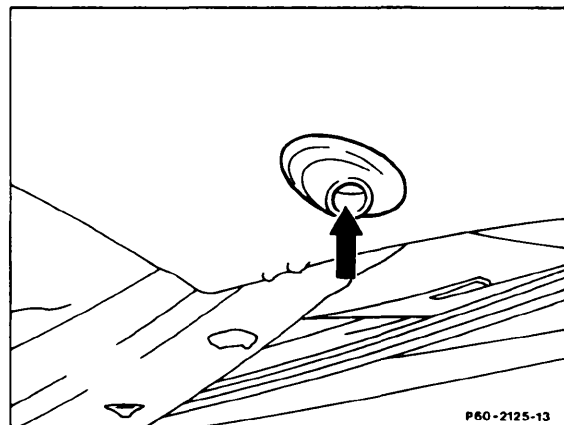


Models 123, 124, 126, 129, 140, 201

- Front of side member

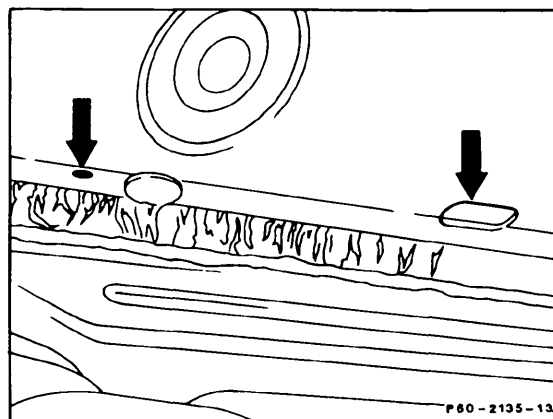


Model 107

- Rear of side member

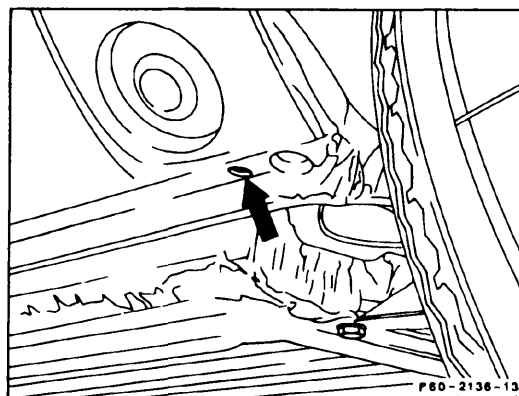


Model 107

- Side member to A-pillar transition joint

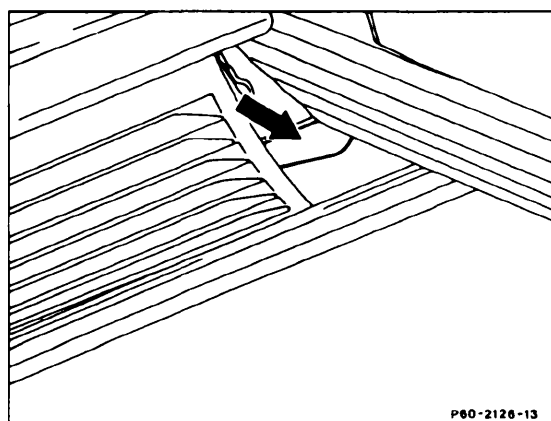


Model 107

- Upper engine compartment

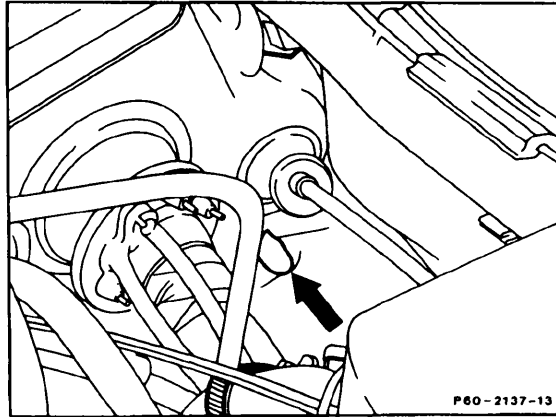


Model 123

- Lower engine compartment

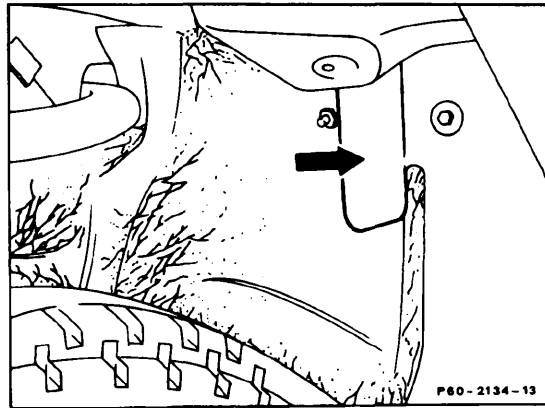


Model 123

- Air plenum (cowl) drain

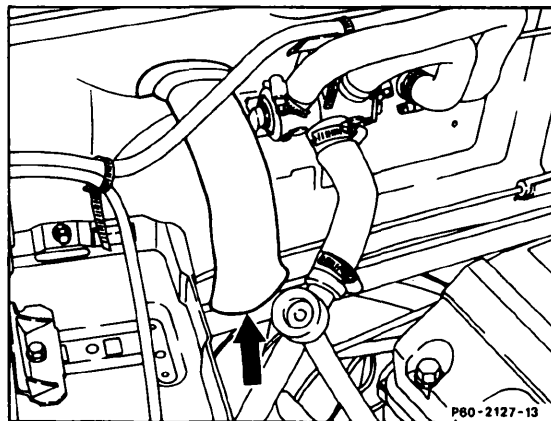


Model 123

- Drain holes in air plenum cover

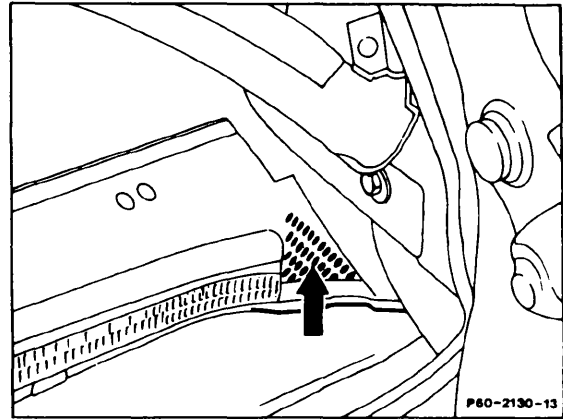


Model 126

- Air plenum (cowl), outer drain hoses

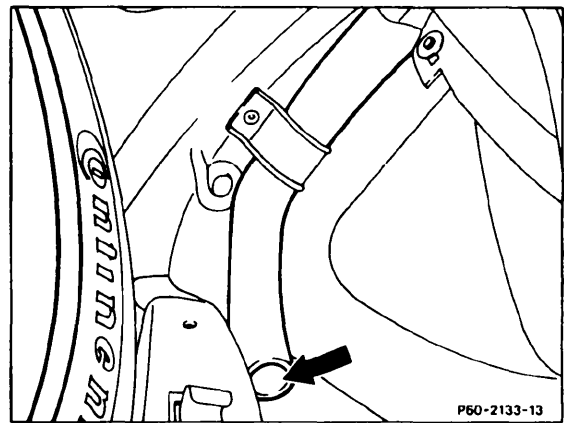


Model 126

- Air plenum (cowl), center drain

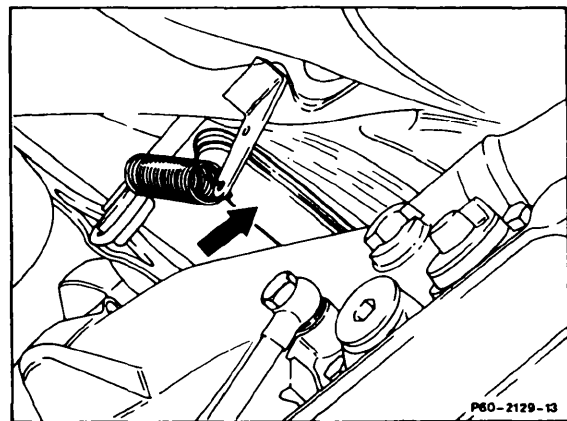


Model 126

- Air conditioning condensation drain

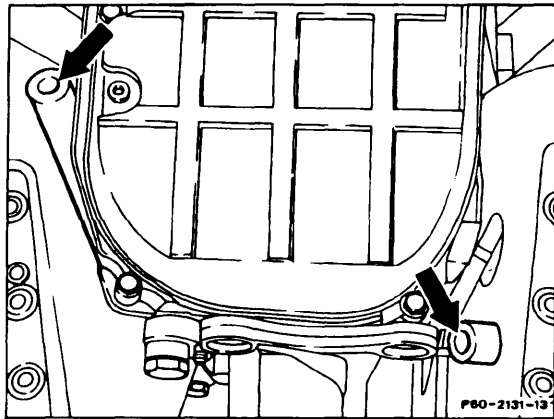


Model 124, 126, 129, 140

- Heating and air conditioning drains (in transmission tunnel)

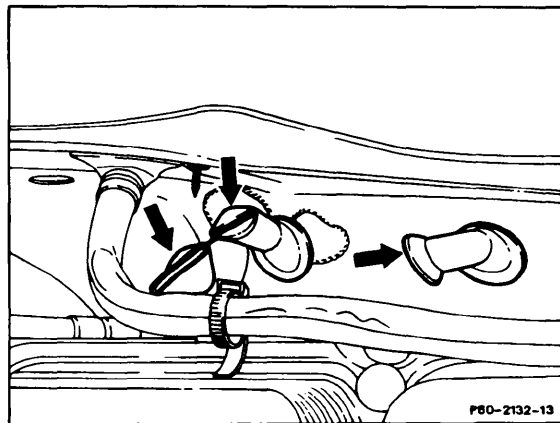


Model 107, 123

- Sunroof front

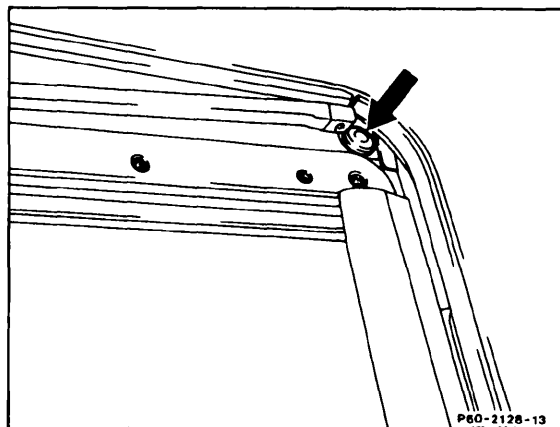


All models

- Upper A-pillar

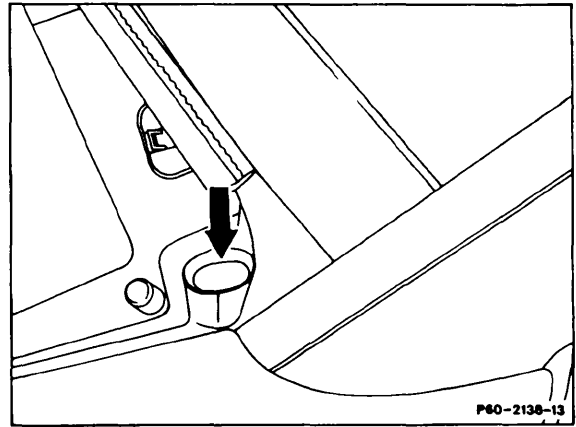


Model 124, 129, 140, 201

- A-pillar drain outlet (top arrow)
- Component compartment (lower arrow)

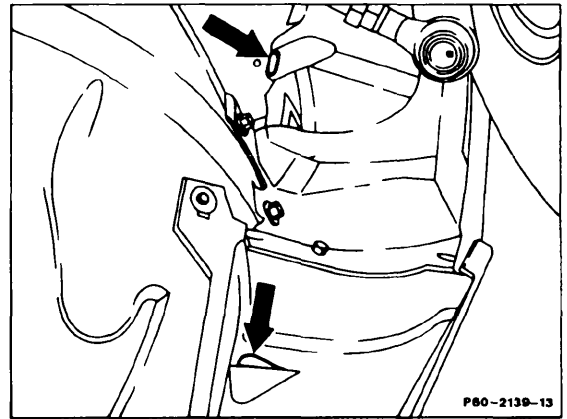


Model 124, 201

- Air plenum (cowl) drain outlet

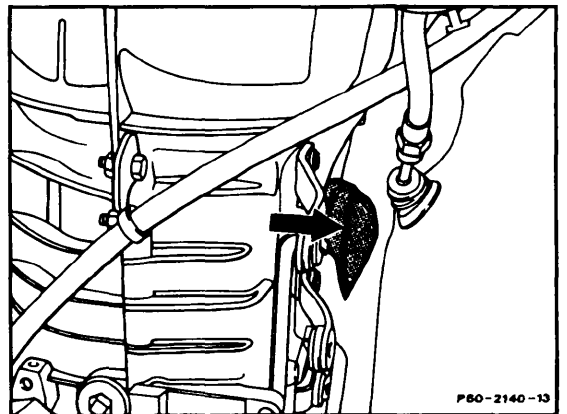


Model 124, 201

- Air plenum (cowl)

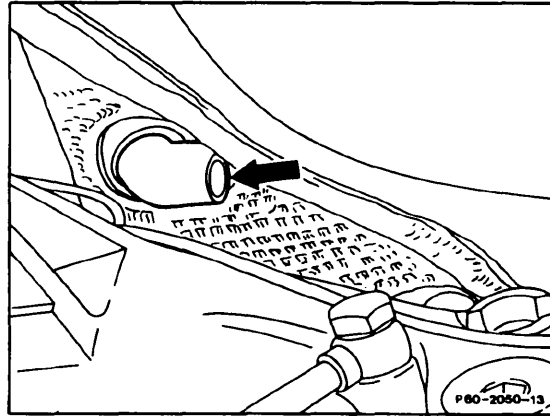


Model 129

- Air plenum (cowl)

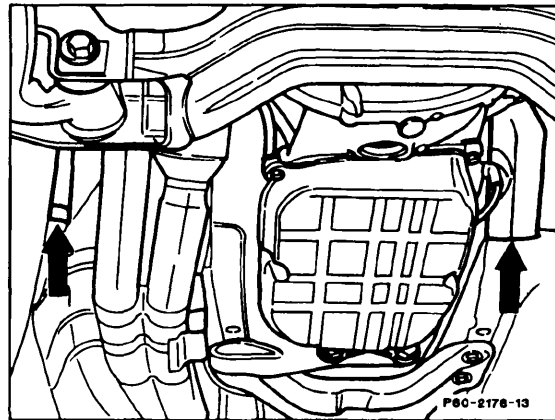

Model 140


- Fuel filler well drain outlet

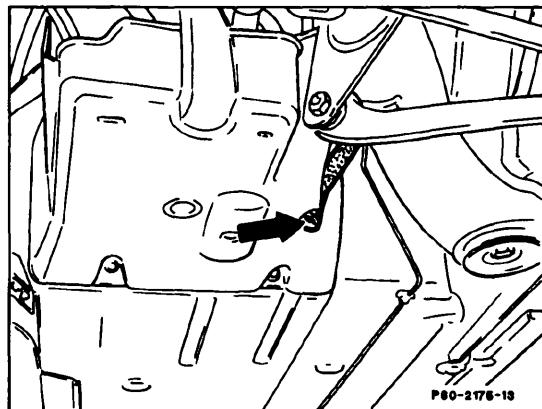

Model 140




- Lower A-pillar

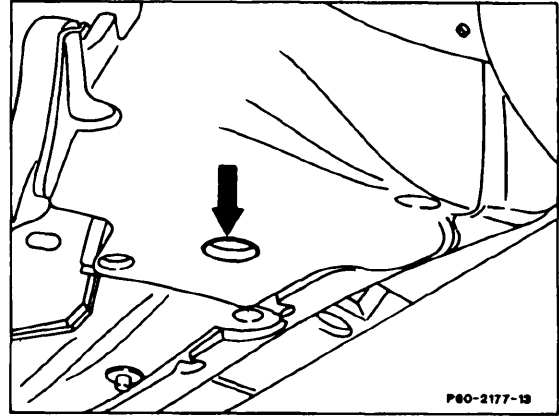

Model 129, 140

- Rear air conditioner

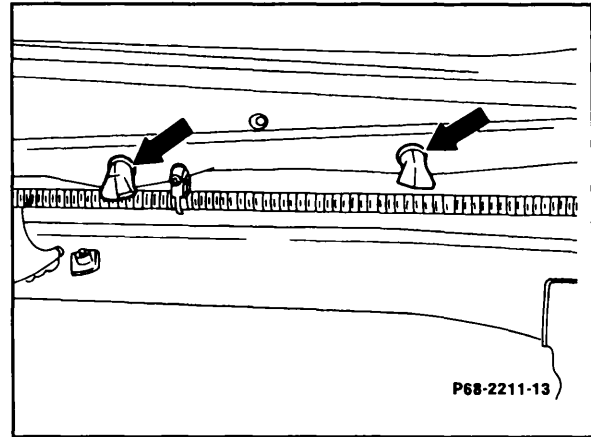

Model 140