

Removal, installation

- 1 Remove both floor mats and foam parts.
- 2 Remove cover on shift lever (68-230).
- 3 Pull off control switch for blower and air distribution. Unscrew nuts (24 mm) and screws.
- 4 Remove molding.



- 5 Remove screws, pull off electric plug connections and take off plate.




- 6 Pull off switch for heatable back window, push switch carrier to the right in forward direction out of detent and remove at the left toward the rear.



7 Unscrew nuts on connection from center console to instrument panel.




8 Push both holding links in downward direction and pull out radio.

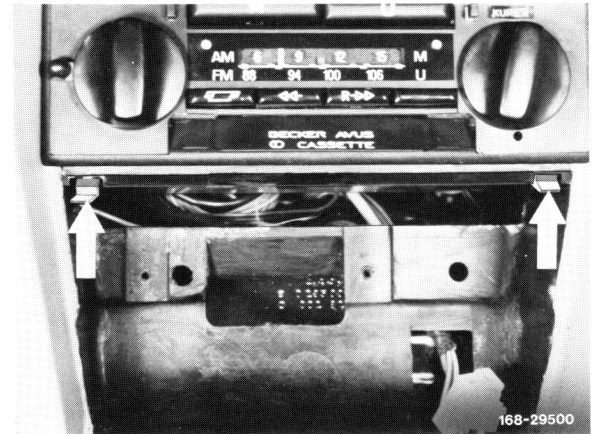


9 Separate connections on radio and remove radio.

10 Push back detent and take switch plate out of holder.

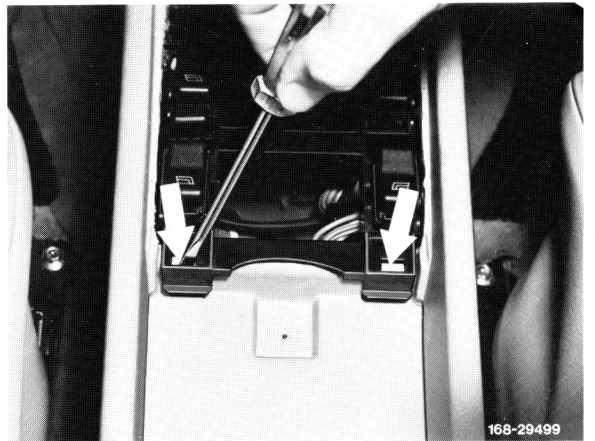


11 Unscrew rear fastening screw.


Note: Screw is countersunk.

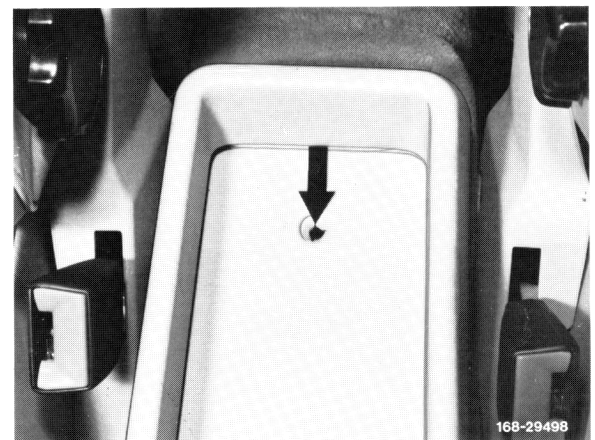

12 Unscrew front fastening screw left and right.

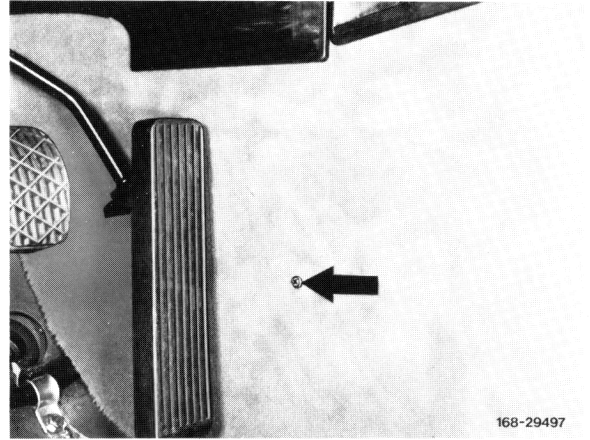

13 Disengage lower holding link of lateral tunnel lining.

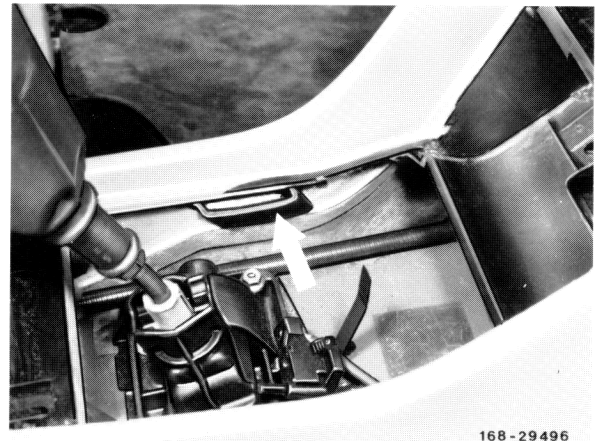

14 Disengage upper holding link of lateral tunnel lining and remove center console toward the rear.

15 Remove lateral tunnel lining toward the rear.

16 For installation proceed vice versa.

