

## 72-101 Removal and installation of door lining on rear door

---

### Removal


---

1 Set window in downward position, then remove window crank (72-110).

2 Force molding from door inside actuation and remove.



3 Unscrew screw on hand grip.

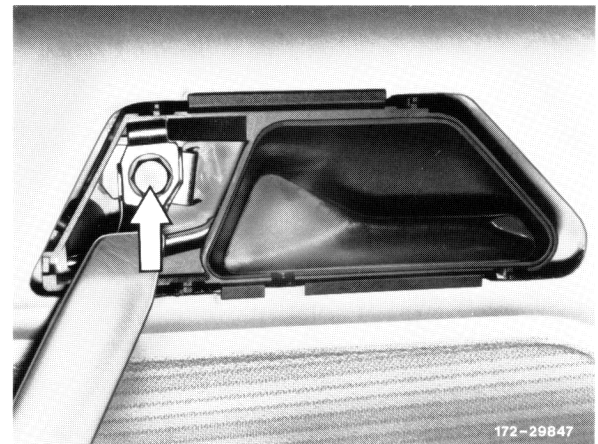

4 Disconnect pull rod on door handle.

5 Slip housing of door inside actuation forward and remove.


6 Remove ashtray housing on rear door.



7 Remove bordering on door lock.


8 Push door lining upward and remove.

**Note:** If the sealing foil on door inside plate is damaged, replace prior to installing door lining.

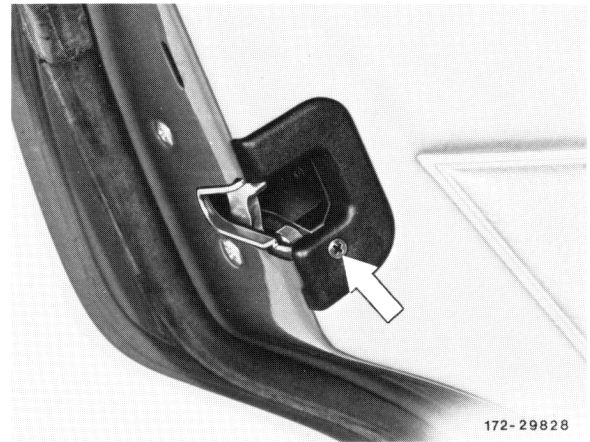

## Installation

9 Introduce door lining from above into plug clamps on window shaft and insert with hook into door inside plate, while inserting locking knob into door lining.

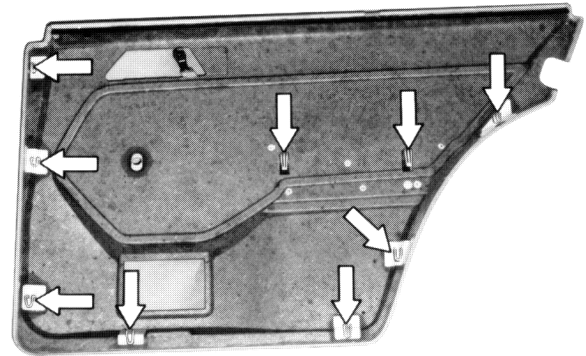

10 Engage pull rod on door handle and insert door inside actuation on door inside plate (3 slots).

11 Fasten hand grip inside with screw.

**Note:** Screw on hand grip is micro-encapsulated. Either replace or screw in with a screw locking compound.

12 For further installation proceed vice versa.

