

72-110 Removal and installation of window crank

Removal

- 1 Push with screwdriver on lock of cover while simultaneously pushing in direction of crankshaft.
- 2 Remove window crank with spacing washer.



Installation

- 3 For installation proceed vice versa.

Note: When mounting cover, make sure that the lock engages in window crank.

