


72-197 Removal and installation of fixed window on rear door

Remove and install


- 1 Remove door lining (72-101).
- 2 Pull off plastic foil.
- 3 Remove locking bracket on window lifting rail.

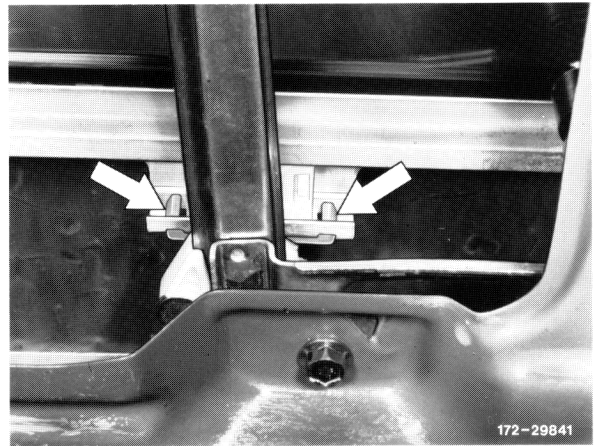

- 4 Run guide piece out of window lifting rail.
- 5 Completely lower window down.
- 6 Force off sealing strip inside and outside by means of plastic wedge and remove.
- 7 Remove flexible window running rail (72-199).



- 8 Unscrew screw on window sill below.

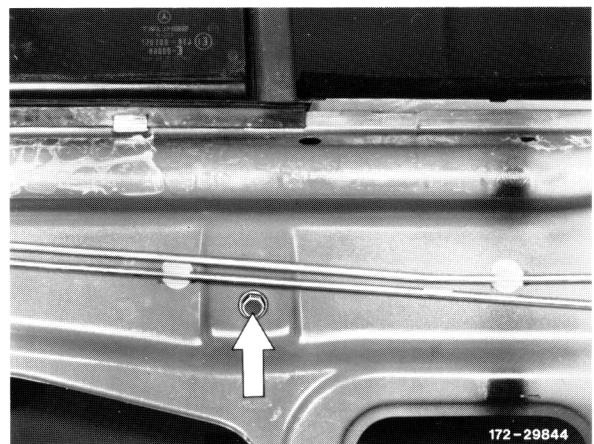

9 Unscrew screw on window sill at top and remove window sill in downward direction.

10 Pull out fixed window in forward direction.

11 For installation proceed vice versa.

Note: For easier assembly, coat sealing frame with soap solution.

