


## 72-251 Removal and installation of door lock on rear door

---

### Removal

---


- 1 Remove door handle outside complete with bearing bracket (72-241).
- 2 Remove door inside actuation with locking linkage (72-231).
- 3 Unscrew screws on door lock.
- 4 Remove door lock on upper door opening.

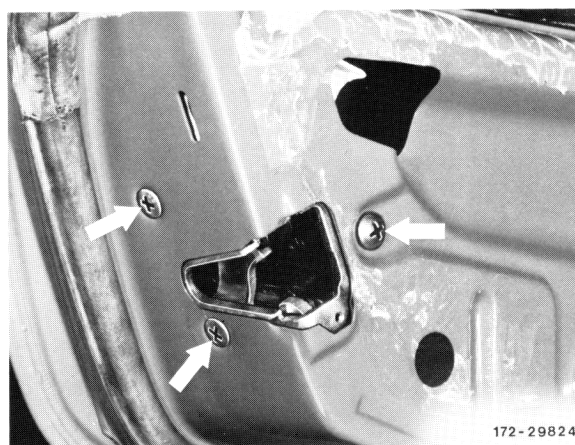


### Installation

---

- 5 Insert door lock.
- 6 First tighten the two fastening screws on face side, then those on door inside panel to 8 Nm.
- 7 For further installation proceed vice versa.

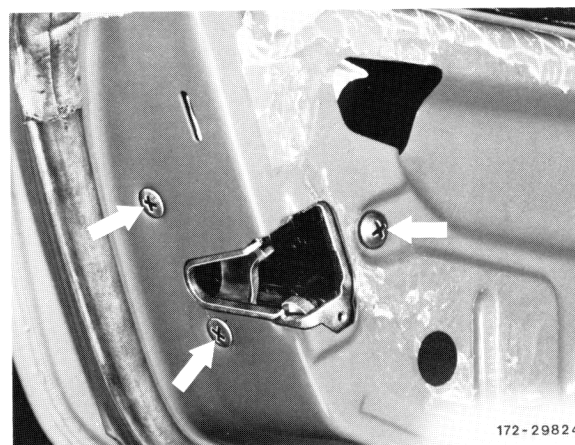


**Note:** When opening grab handle, make sure that the grab handle is at rest behind actuating lever of door lock.

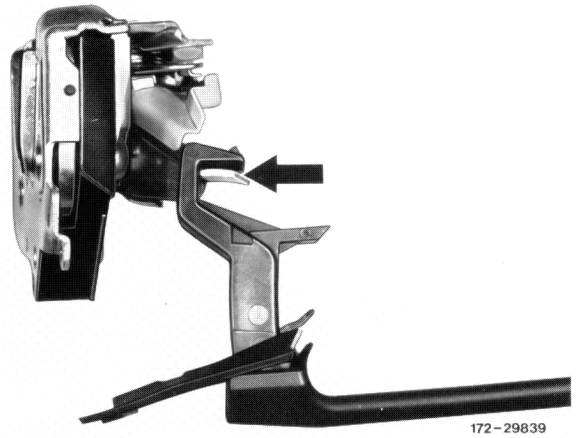


8 First tighten the two fastening screws on face side, then those on door inside panel to 8 Nm.

Shown on driver's door

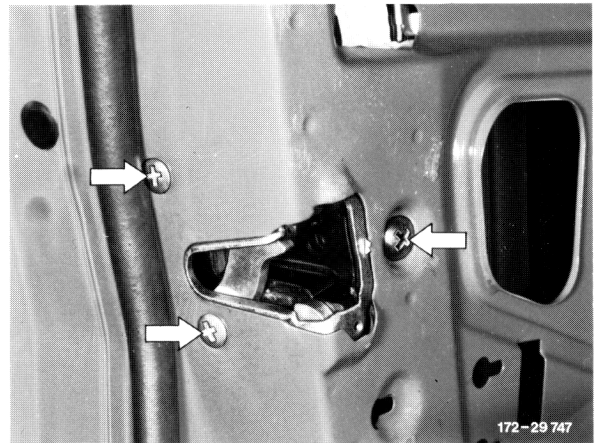

9 Insert lock cylinder together with rotating rod into rotating socket on door lock and fasten.

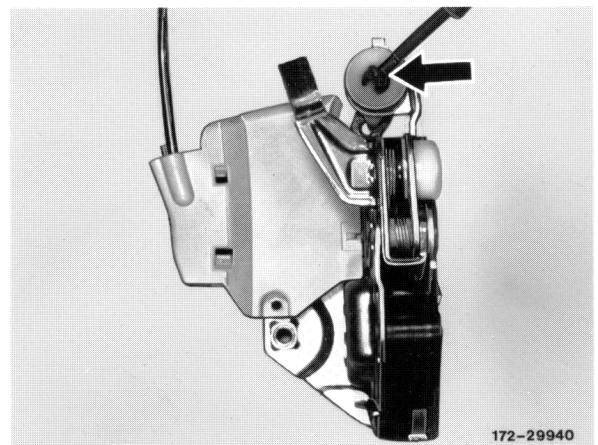


10 Remove cover on face side of door in area of door lock.


11 Adjust poppet clearance between actuating lever for door lock and grab handle with philips screwdriver on eccentric bolt.

**Note:** Poppet clearance should be 0-1 mm.

Shown on driver's door

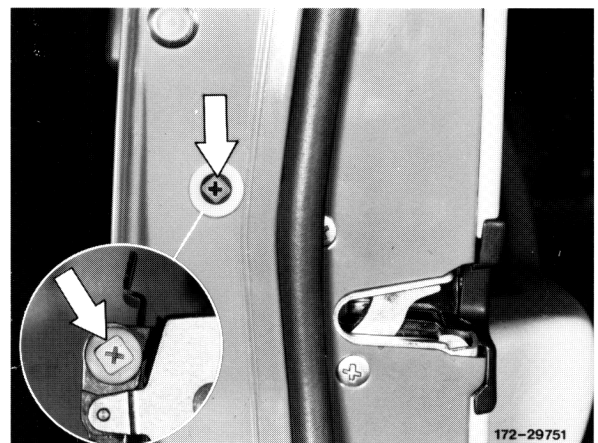

12 Continue to reinstall in opposite order.

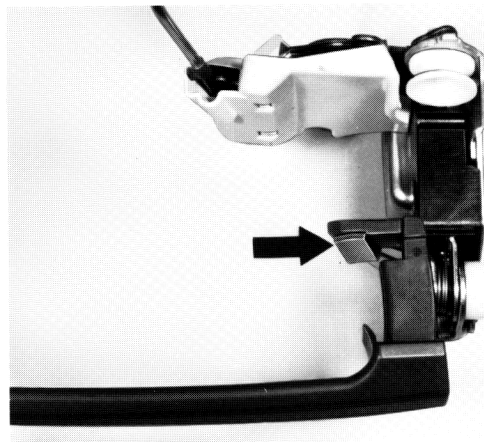

172-29750