


88-300 Removal and installation of engine hood


Removal, installation

1 Move engine hood into vertical position (90°) and place one rag each under outer corners.


2 Force cover from engine hood reinforcement.

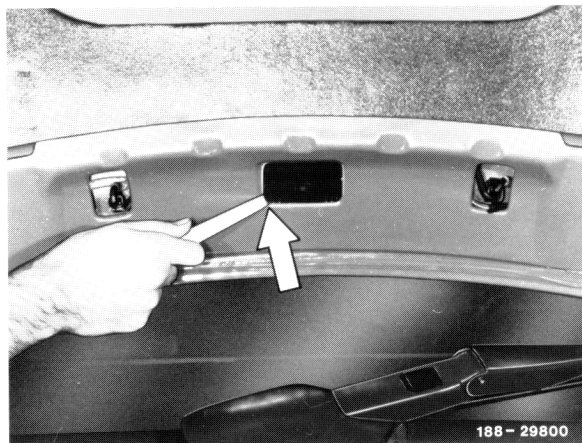

3 Pull hose (supply line) from check valve.

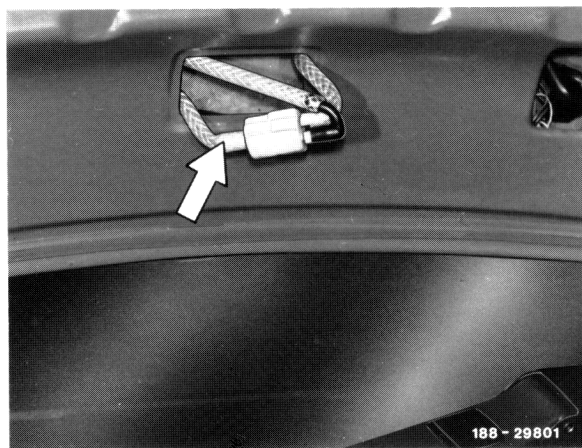


4 Pull connecting cable from righthand windshield washer nozzle.

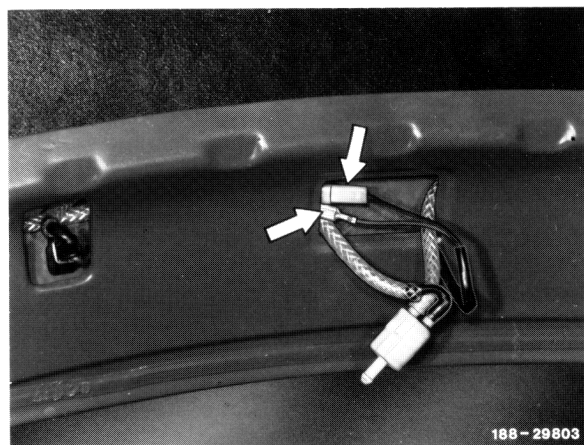

5 Pull connecting cable from lefthand windshield washer nozzle.

6 Expose electric connecting cable and hose on engine hood.

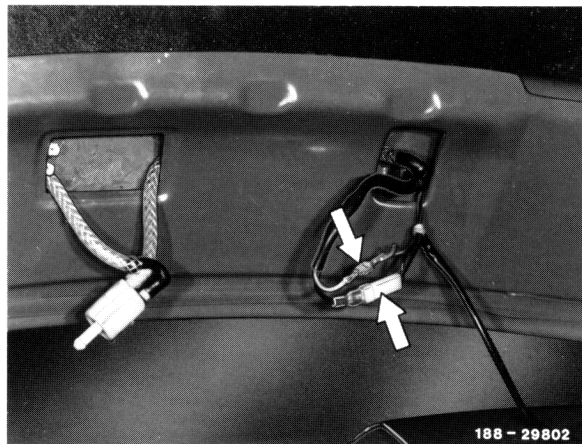

7 Unscrew fastening screws left and right and remove engine hood.

8 For installation proceed in reverse order.

Note: Perform adjusting jobs according to 88-302.

