



A. Sedan and coupe

Removal

- 1 Pull electrical connections from licence plate lamp units and expose connecting cable in area of trunk lid.
- 2 Force off covers above mounting bolts.

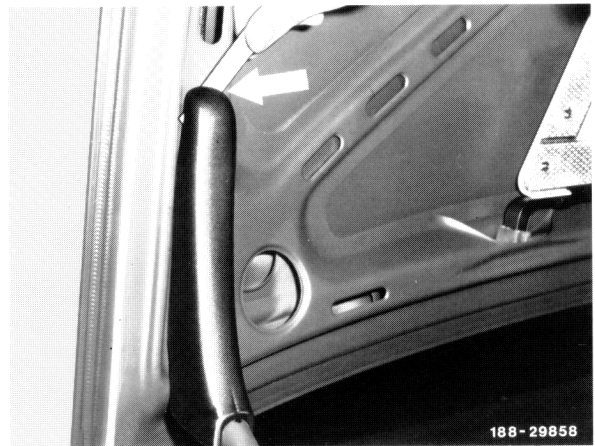


- 3 Loosen rear screw on hinge and completely unscrew front screw.
- 4 Remove trunk lid.

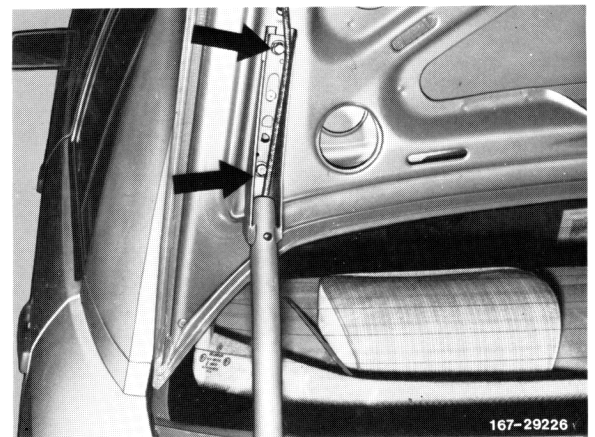


Installation

- 5 Mount trunk lid with rear screw on hinge and screw in front screw.

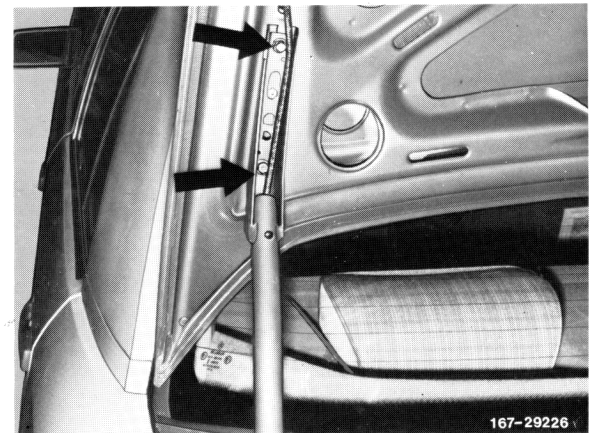

- 6 Align trunk lid and tighten screws.
- 7 Install connecting cable for licence plate lamp units and connect.
- 8 Adjust trunk lid, if required (88-520).


Note: When replacing trunk lid, perform specified sealing and preservation measures (97-400 or 91-150).

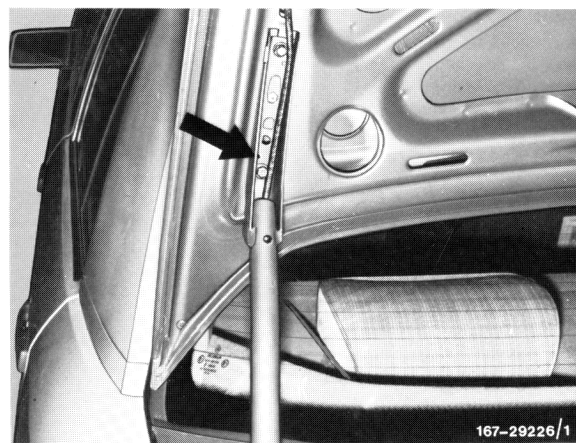

B. Cabriolet

- 1 Remove warning triangle on trunk lid.
- 2 Unclip holder for warning triangle on trunk lid.
- 3 Remove trunk lid cover.
- 4 Disconnect electrical connections on licence plate lamps.
- 5 Expose connection cable in area of trunk lid.
- 6 Mark installation position of hinge levers in relation to trunk lid to facilitate reassembly.
- 7 Screw out bolts (1) on left and right (4 each).

1 Bolt for longitudinal adjustment
2 Bolts for height adjustment

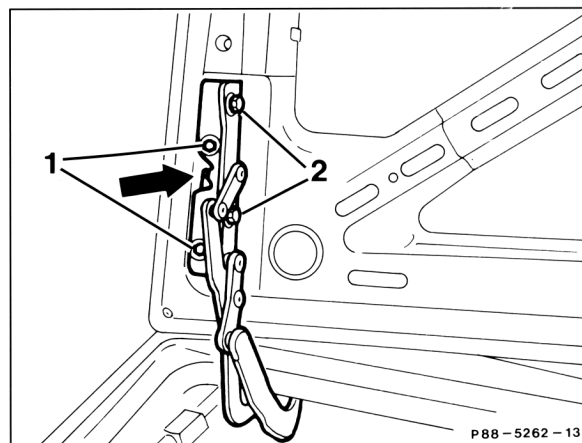

8 Lift trunk lid upward out of arresting hooks (arrow) with help of second person and lay down on suitable surface.

9 Reinstall in opposite order.

10 Adjust trunk lid height with screws (2).

Note

For further adjustment measures see 88-520.



When replacing the trunk lid perform specified sealing and preservation measures (97-400 or 97-150).