

A. Adjusting in longitudinal direction

- 1 Force off covers above fastening screws.




- 2 Loosen screws on hinge left and right.



- 3 Loosen screws on closing eye of trunk lid.




4 Adjust trunk lid in such a manner that the rear edge of the cover is flush with rear fender.

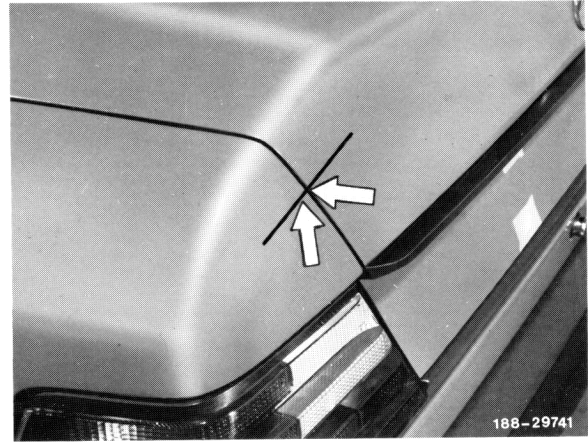

5 Tighten screws on hinge left and right.


6 Adjust closing eye in such a manner that the lock engages properly.

7 Tighten screws on closing eye.

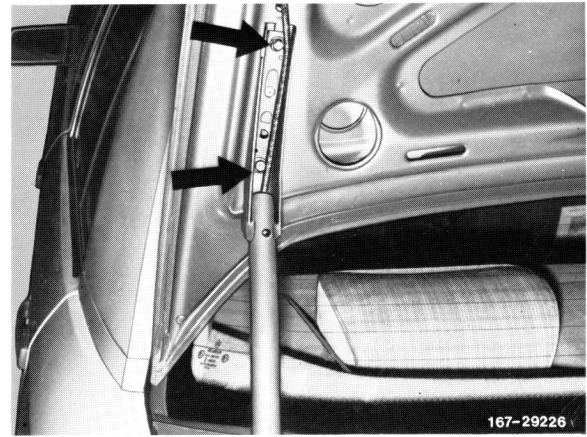


B. Adjusting in height

1 Adjust front edge of trunk lid by aligning hinge lever in height in such a manner that the outer edge of the trunk lid is flush with rear fender.

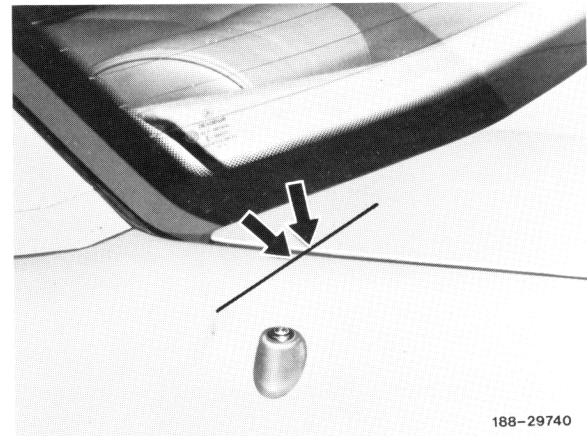


2 Loosen depth stop left and right and slide completely upward.


Note: Stop may be glued down with the seal and must be released from there.

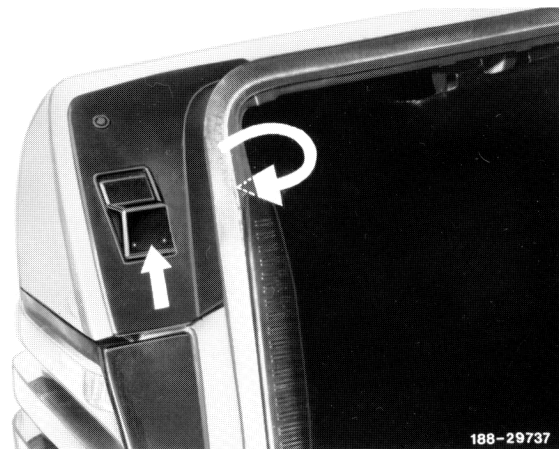

3 Loosen fastening screws of trunk lid lock and move lock in downward direction.

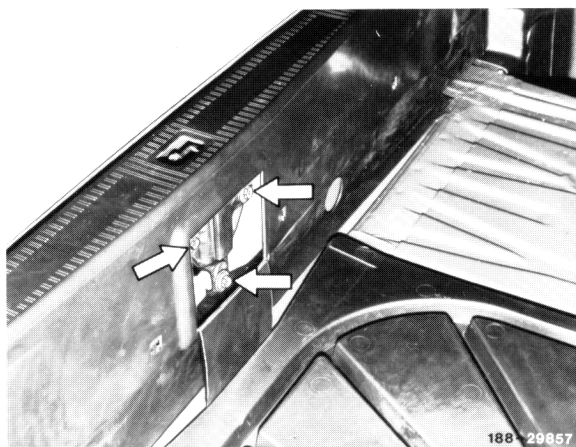


4 Close trunk lid and push down at the rear until the trunk lid upper edge is flush with rear fender.

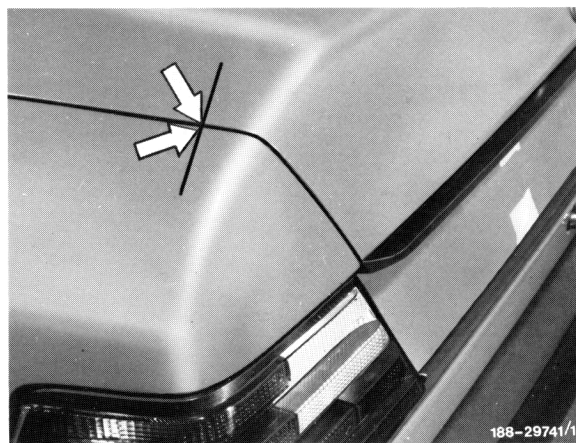

5 Tighten depth stop left and right.

6 Adjust trunk lid lock in such a manner that the trunk lid is perfectly closing.

7 Tighten screw on trunk lid lock.

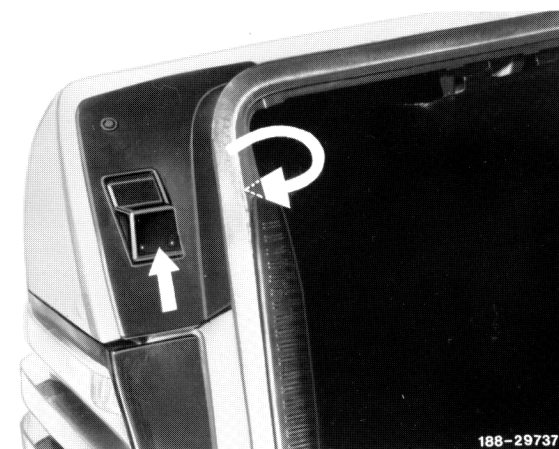

C. Adjusting during rear end repairs

1 During repairs of rear end which require removal of parcel shelf, an additional height and length adjustment is possible on bearing bracket of hinge lever by means of eccentric bolt.

