

## 91-110 Removal and installation of front passenger seat


---

Head restraint removed.

### Removal, installation


---

1 Slide front passenger seat toward the rear and unscrew both screws on seat guide rails, front.

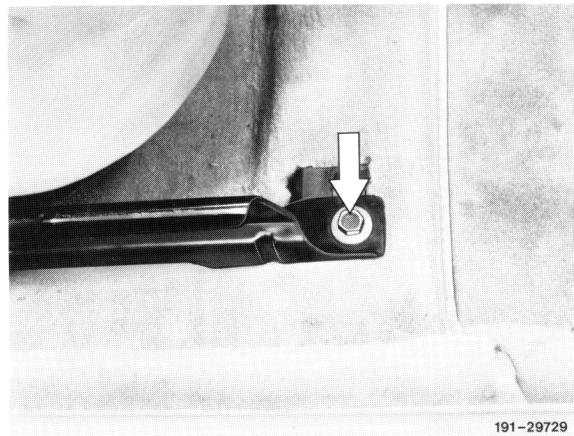

2 Slide front passenger seat forward.

3 Remove screws on seat guide rails, rear.

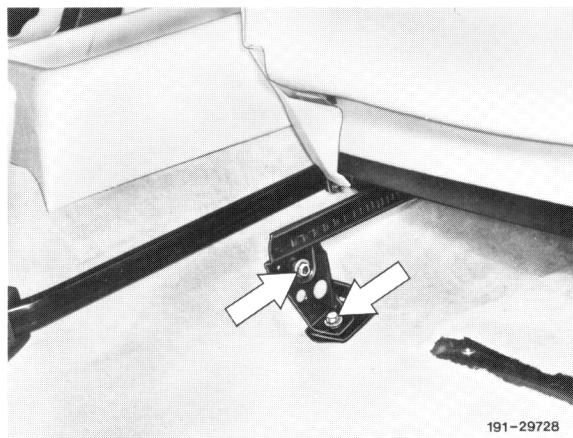

4 Pull front passenger seat forward out of slide rail.

5 Remove front passenger seat.

6 For installation proceed vice versa.

