


A. Sedan

Removal

1 Push detent at left and right to the rear and remove rear seat cushions.

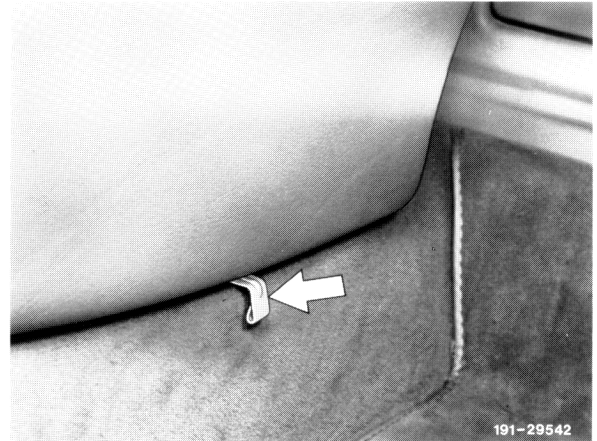

2 Unscrew lower fastening screws outside and in center.


3 Swivel head restraints in rear passenger compartment toward the rear.

4 Remove rear seat backrest in upward direction.




Installation

5 Engage rear seat backrest in upper holding links, paying attention to correct location of rear seat belts.

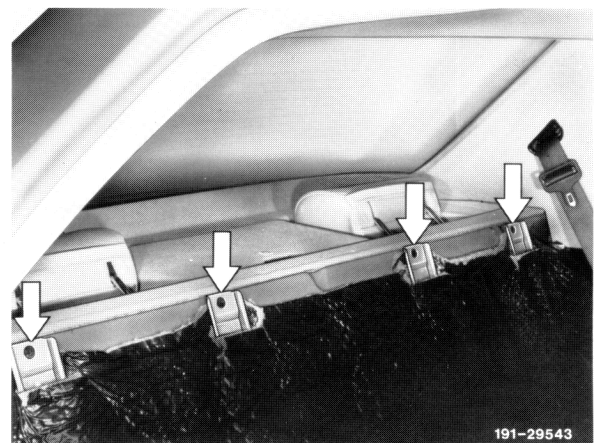

6 Screw on backrest below, paying attention to installation position of foam members in range of belt locks. Make sure that the foam members are not pinched-in behind seat backrest frame.


7 When installing rear seat, expose lap belt and engage rear seat at front in detent.

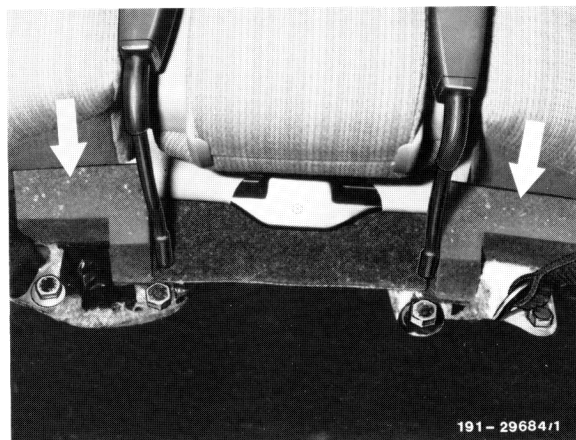


B. T-sedan

Remove and install


1 Actuate handle on rear seat cushion and tilt rear seat cushion in upward direction.

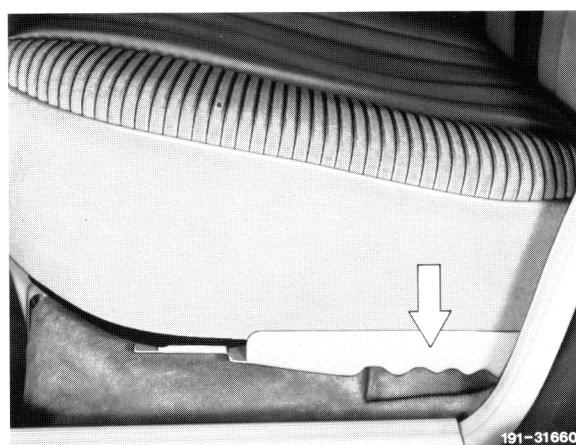

2 Pull up locking lever on underside of seat cushion and remove seat cushion in upward direction out of bearing pin.

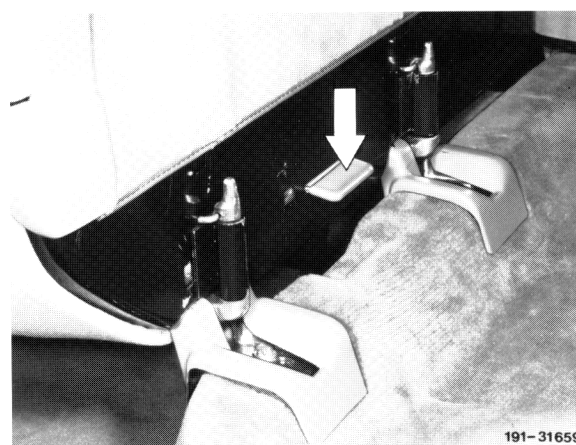


3 Expose belt locks at rear seat backrest, forcing off holder for this purpose and pulling elastic band out in downward direction.

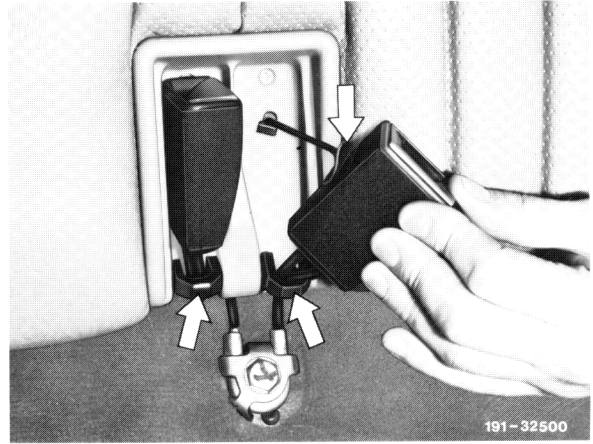

4 Slide trim on backrest hinge in upward direction.



5 Unscrew screws (3 each) on backrest hinge.

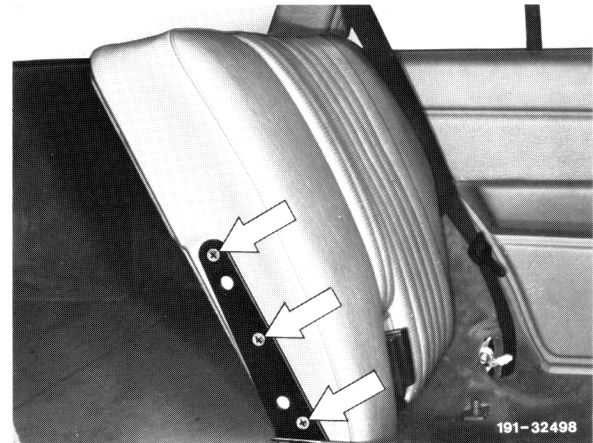


6 Pull lock from bearing bolt.

7 Pull rear seat backrest out of bearing and remove.



Shown with wheelhouse trim removed





C. Coupe

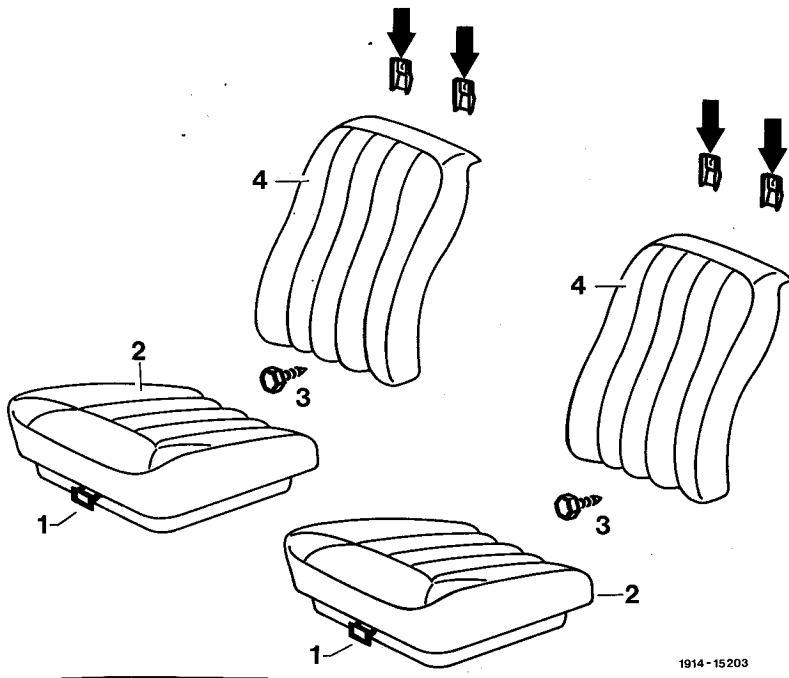

1914-15203

Locking button (1)	push
Rear seat cushion (2)	lift at front and remove
Screw (3)	unscrew
Rear seat backrest (4)	push upward and remove. During installation, engage rear backrest at top in holder on rear wall (arrows).

D. Convertible

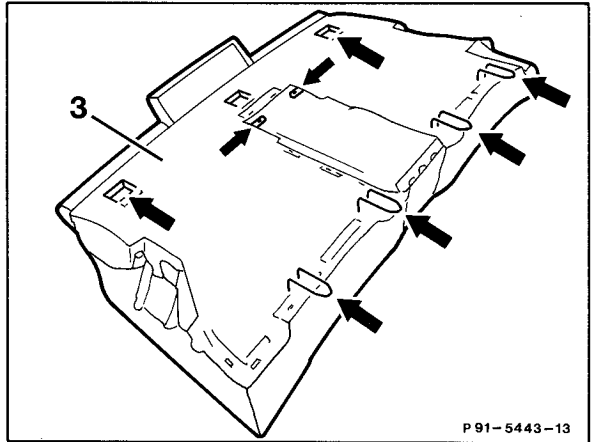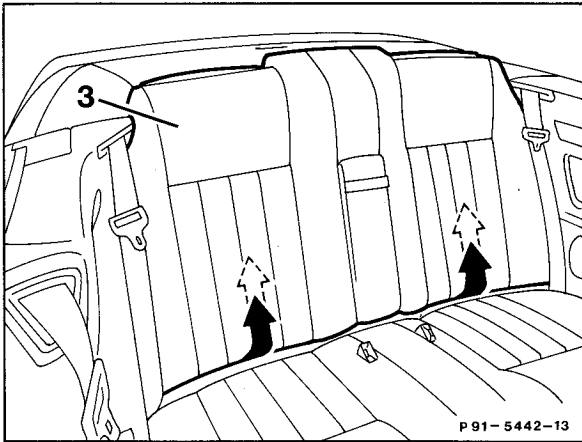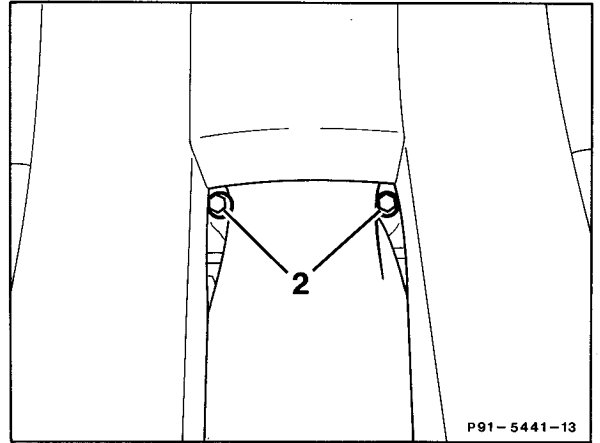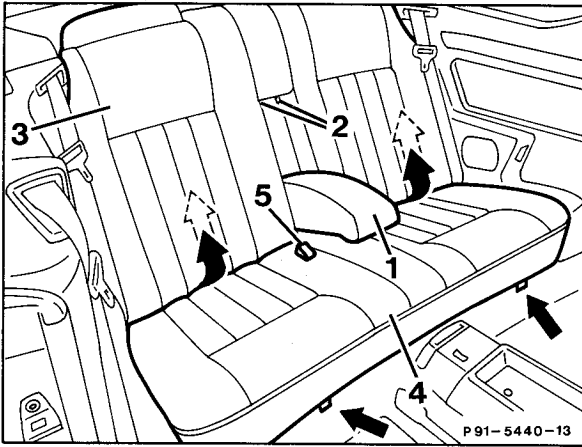



Soft top
 Front seat
 Rear armrest (1)
 Mounting screws (2) in cutout for rear armrest ..

open.
 move forward and tip front backrest forward.
 fold down.
 screw out, screw in (2 each, WAF 8).

Rear seat backrest (3)

Note
 To reach screws pull foil in upper area toward center.
 remove by pulling upward out of insert tabs, install.

12015

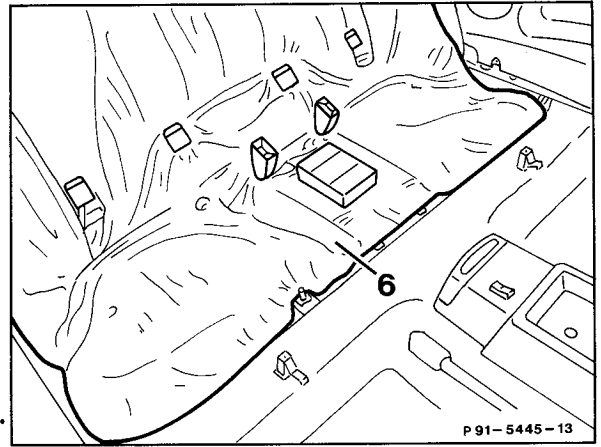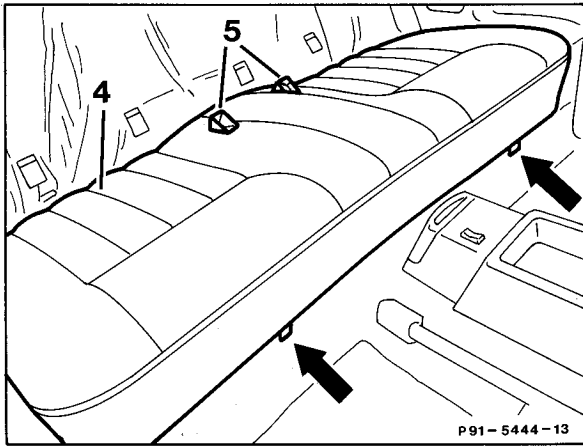

Catches on left and right
 Rear seat bench (4)

press (arrows).
 lift over belt buckles (5) and remove, install.

Note

The rear seat bench (4) can also be removed without removing the rear backrest.

Before installing rear seat bench and rear backrest

install insulating mat (6) in rear or check position.



When installing guide belt buckles (5) through rear seat bench (4) and ensure that belt buckles (5) are not damaged.