


## 91-520 Removal and installation of seat belt extender control unit

Preliminary work:  
Rear seat removed (91-170)

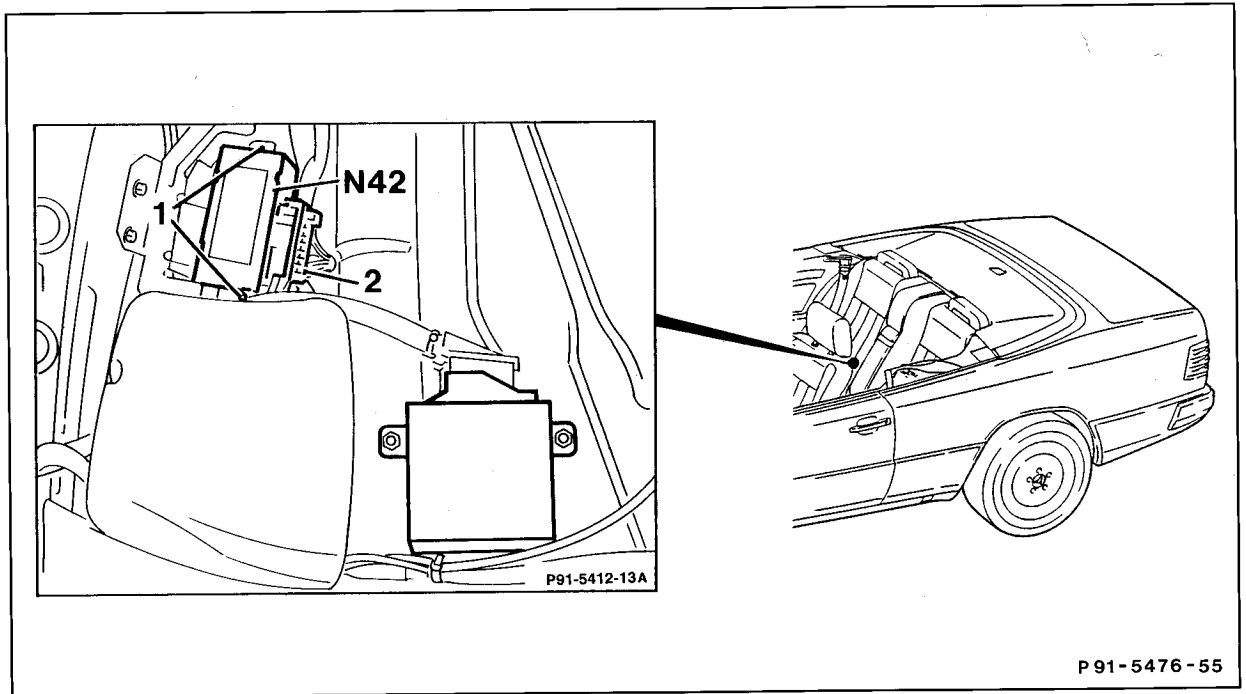

Ignition/starter switch .....	turn to position 0.
Ground lead on battery .....	disconnect, connect.
Screws (1) .....	screw out, screw in.
Plug connectors (2) on control unit (N42) .....	disconnect, connect.