

G2


AR05.10-P-8484HA

Removing and installing slide rail in timing case cover

14.1.98

ENGINE 604, 605, 606

- 1 Bearing pin
- 2 Bearing pin
- 3 Slide rail
- 4 Oil pump chain
- 5 Crankshaft
- 6 Spring
- 7 Bush
- 8 Tensioning lever

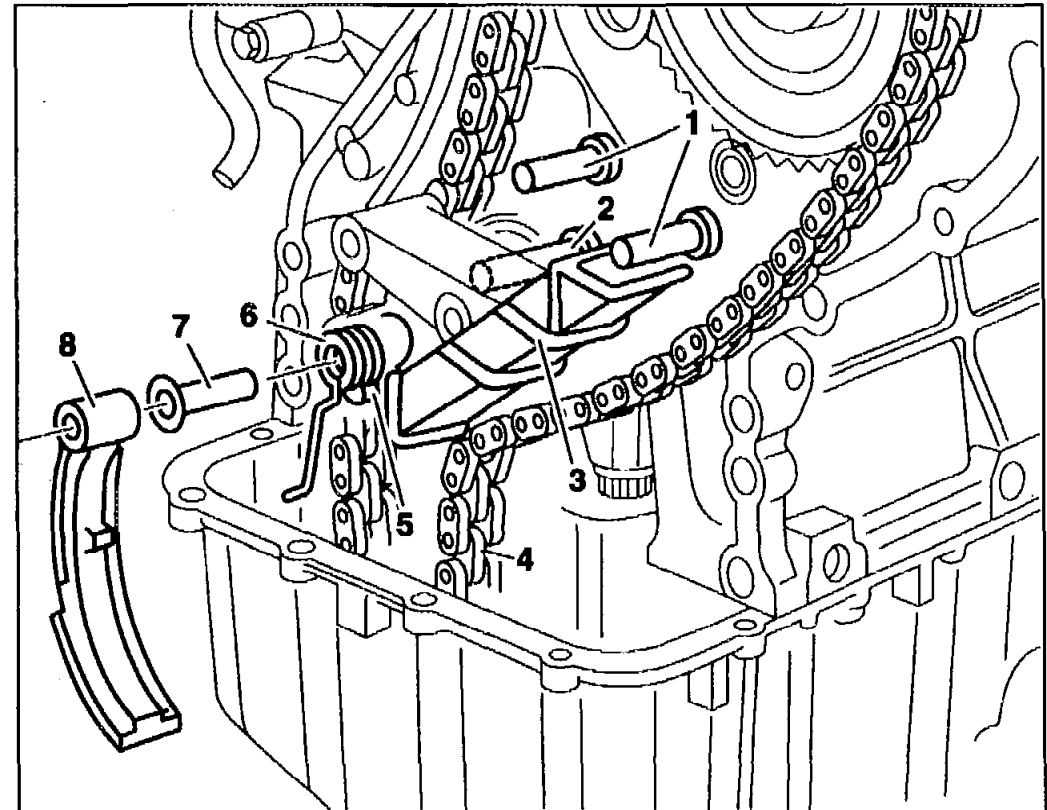

P05.10-2015-11

	<p>Removing, installing</p>		
<p>1</p>	<p>Remove timing case cover</p>	<p>All except engine 606 in model 463</p>	<p>AR01.40-P-8000HA</p>
		<p>Only engine 606 in model 463</p>	<p>AR01.40-P-8000GG</p>

2	Pull tensioning lever (8) off bearing pin (2) and carefully slacken spring (6)		
3	Pull off tensioning lever (8) together with spring (6) and bush (7)		
4	Pull off slide rail (3)	i Timing chain drive as-built description	GF05.10-P-4000HA F1
5	Install in the reverse order		